




WF702U4BK**
WF700U4BK**

Automatic Electric Washing Machine

user manual

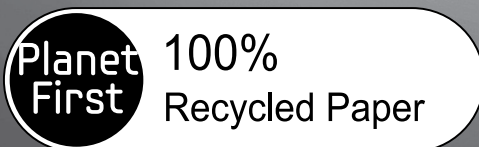

This manual is made with 100% recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product.



features of your new samsung washing machine

Your new washing machine will change the way you feel about doing laundry. From its super-size capacity to its energy efficiency, the Samsung washing machine has all the features to turn a mundane chore into a pleasure.

- **Energy Saving**

This model offers more efficient energy use compared to standard A rated machine with the special Bubble generator system and Samsung Inverter motor.

- **Less Noise & Vibration**

This Samsung washer performs very quietly minimizing noise and vibration with smart control technology, which enables it to maintain the lowest possible vibration. Thus, the drum keeps perfect balance.

- **Eco Bubble Wash**

Samsung's effective Eco Bubble delivers improved cleanliness with advanced fabric care. Eco Bubble allows detergent to distribute evenly and penetrate fabrics faster and deeper.

- **Quick Wash**

No time to waste! Our 15 minute Quick Wash will allow you to Wash and Run. Our Quick Wash programme can help with your busy life - now you can wash your favourite clothes (up to 2Kg) in just 15 minutes!

- **Eco Drum Clean**

Using Eco Drum Clean helps to keep washing machine clean even without any chemical detergent or bleach. Keep your drum clean and odorless with specialized cleaning program.

- **Baby Care**

Your Samsung washing machine includes wash programs that add protection to the clothing of children with sensitive skin.

These programs reduce skin irritation in children by minimizing detergent residue. In addition, these programs classify laundry into various types and the wash is performed according to the laundry characteristics so that children's clothes feel refreshingly clean whenever they are put on.

- **Hand Wash**

Special care can be determined by the appropriate temperature, the gentle wash action and the appropriate amount of water.

- **Child Lock**

The Child Lock function ensures that curious little hands are kept out of your washing machine.

This safety feature stops your children from playing with the operation of the washing machine, and alerts you when it is activated.

- **Delay End**

Delay a cycle for up to 19 hours in one-hour increments and increase the convenience of using your washing machine especially when you have to go out.

- **Digital Graphic Display**

The Digital Graphic Display control panel is clear and easy to use for minimum fuss and hassle. And while it is easy to operate, the Digital Graphic Display enables you to make quick and accurate adjustments to your wash for excellent washing results.

- **Aqua Hose & Leakage Sensor (Selected models)**

The smartly designed water safety system for Samsung washing machines includes an intelligent hose for stopping water leaks at the source and leakage sensor at the bottom. If the hose breaks or if water leaks are detected, an internal sponge will expand to block water from the spigot.

This manual contains important information on the installation, use, and care of your new Samsung washing machine. Refer to it for descriptions of the control panel, instructions on how to use the washing machine, and tips for making the most of its state-of-the-art features and functions. The “**Troubleshooting and information codes**” section on page 37 tells you what to do if something goes wrong with your new washing machine.

safety information

Congratulations on your new Samsung ActivFresh™ washer. This manual contains important information on the installation, use and care of your appliance. Please take time to read this manual to take full advantage of your washer's many benefits and features.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance and retain it at a safe place near the appliance for your future reference. Use this appliance only for its intended purpose as described in this instruction manual.

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washer.

Because these following operating instructions cover various models, the characteristics of your washer may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

 WARNING	Hazards or unsafe practices that may result in severe personal injury, death and/or property damage.
 CAUTION	Hazards or unsafe practices that may result in personal injury and/or property damage.
 CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:
	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service centre for help.
	Note

These warning signs are here to prevent injury to you and others.

Please follow them explicitly.

After reading this section, keep it in a safe place for future reference.

-  Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.



WARNING: To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

Do not let children (or pets) play in or on your washing machine. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

safety information



SEVERE WARNING SIGNS FOR INSTALLATION



The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The appliance is heavy, take care upon lifting it

Plug the power cord into an AC 230V/60Hz/15A wall socket or higher and use the socket for this appliance only. In addition, do not use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Failure Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

When the appliance or power plug or power cord is damaged, contact your nearest service centre.



This appliance must be properly grounded.

Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.



Do not install this appliance near a heater, inflammable material.

Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).

Do not install this appliance in a location of low temperature

- Frost may cause tubes to burst

Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Do not use an electric transformer.

- It may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.

Do not twist or tie the power cord.

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

Do not lay the power cord and tubes where you may fall over them.



CAUTION SIGNS FOR INSTALLATION



- This appliance should be positioned in such a way that it is accessible to the power plug.
- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.

- Failure to do so may result in abnormal vibrations, moves, noise, or problems with the product.



SEVERE WARNING SIGNS FOR USING



- If the appliance is flooded, cut the water supply and power immediately and contact your nearest service centre.

- Do not touch the power plug with wet hands
- Failure to do so may cause electric shock

If the appliance generates a strange noise, a burning smell or smoke, unplug the power plug immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washer. In addition, when disposing of the appliance, remove the washer door lever.

- If trapped inside, the child may become trapped and suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washer before using it.

safety information

-  Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other flammable or explosive substances.

- This may result in electric shock, fire or an explosion.

Do not open the washer door by force while it is operating (high-temperature washing/drying/spinning).

- Water flowing out of the washer may result in burns or cause the floor to be slippery.

This may result in injury.

- Opening the door by force may result in damage to the product or injury.

Do not insert your hand under the washer.

- This may result in injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children or infirm persons use this washer unsupervised. Do not let children climb in the appliance

- Failure to do so may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washer while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling at the power cord, always grip plug firmly and pull straight out from the outlet.

- Damage to the cord may cause short-circuit, fire and/or electric shock

-
-  Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse (such as copper, steel wire, etc.) other than the standard fuse.

- When repairing or reinstalling the appliance is required, contact your nearest service centre.

- Failure to do so may result in electric shock, fire, problems with the product, or injury.

-
-  If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

When the water supply hose comes loose from the faucet and floods the appliance, unplug the power plug.

- Failure to do so may result in electric shock or fire.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder/lightning storm.

- Failure to do so may result in electric shock or fire.



CAUTION SIGNS FOR USING



When the washer is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washer using a damp and soft cloth.

- Failure to do so may result in discoloration, deformation, damage or rust.

The front glass may be broken by a strong impact. Take care when using the washer.

- When the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the faucet slowly.

Open the faucet slowly after a long period of non-use.

- The air pressure in the water supply hose or the water pipe may result in damage to a part or in water leakage.

If a drain error occurs during an operation, check if there is a draining problem.

- If the washer is used when it is flooded because of a draining problem, it may result in electric shock or fire due to electric leakage.

Insert the laundry into the washer completely so that laundry does not get caught in the door.

- If laundry gets caught in the door, it may result in damage to the laundry or the washer, or result in water leakage.

Ensure that the faucet is turned off when the washer is not being used.

- Ensure that the screw on the water supply hose connector is properly tightened.
- Failure to do so may result in property damage or injury.

Check if the rubber seal is not contaminated by foreign substances (waste, thread, etc).

- If the door is not closed completely, it may result in water leakage.

Open the faucet and check if the water supply hose connector is firmly tightened and that there is no water leaking before using the product.

- If the screws or the water supply hose connector are loose, it may result in water leakage.

The product you have purchased is designed for domestic use only.

The use for business purposes qualifies as product misuse.

In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

safety information



Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the product, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not place an object that generates a electromagnetic field near the washer.

- This may result in injury due to a malfunction.

Since the water drained during a high-temperature wash or drying cycle is hot, do not touch the water.

- This may result in burns or injury.

Do not wash, spin or dry water-proof seats, mats or clothing (*) unless your appliance has a special program for washing these items.

- Do not wash thick, hard mats even if the washer mark is on the care label.
- This may result in injury or damage to the washer, walls, floor or clothing due to abnormal vibrations.

* Woollen bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle, car covers, etc.

Do not operate the washer when the detergent box is removed.

- This may result in electric shock or injury due to water leakage.

Do not touch the inside of the tub during or just after drying as it is hot.

- This may result in burns.

Do not insert your hand into the detergent box after opening it.

- This may result in injury as your hand may be caught by the detergent input device. Do not place any objects (such as shoes, food waste, animals) other than laundry into the washer.
- This may result in damage to the washer, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knives, fingernails, etc.

- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.

- This may result in the rubber seal becoming deformed and water leakage.

Do not leave metal objects such as a safety pin or hair pin, or bleach in the tub for long periods of time.

- This may cause the tub to rust.
- If rust starts appearing on the surface of the tub, apply a cleansing agent (neutral) to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.

- This may result in spontaneous combustion or ignition due to the heat of the oxidation of the oil.

Do not use hot water from water cooling/heating devices.

- This may result in problems with the washer.

Do not use natural hand-washing soap for the washer.

- If it hardens and accumulates inside the washer, it may result in problems with the product, discoloration, rust or bad odors.

Do not wash large laundry items such as bedding in the washing net.

- Place socks and brassieres into the washing net and wash them with the other laundry.
- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.

- If it accumulates inside the washer, it may result in water leakage.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Make sure that the pockets of all clothing to be washed are empty.

- Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons, or other heavy metal.



WARNING

SEVERE WARNING SIGNS FOR CLEANING



Do not clean the appliance by spraying water directly onto it.

Do not use benzene, thinner or alcohol to clean the appliance.

- This may result in discoloration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failure to do so may result in electric shock or fire.

contents

SETTING UP YOUR WASHING MACHINE

13

- 13 Checking the parts
- 14 Meeting installation requirements
 - 14 Electrical supply and grounding
 - 14 Water Supply
 - 15 Drain
 - 15 Flooring
 - 15 Surrounding temperature
 - 15 Alcove or closet installation
- 15 Installing your washing machine

WASHING A LOAD OF LAUNDRY

21

- 21 Washing for the first time
- 21 Basic instructions
- 22 Using the control panel
 - 25 Child lock
 - 25 Sound off
 - 25 Delay end
 - 26 My cycle
 - 27 Eco Bubble
 - 28 Washing clothes using the cycle selector
 - 29 Washing clothes manually

29 Laundry guidelines

30 Detergent and additives information

- 30 Which detergent to use
- 31 Detergent drawer
- 31 Liquid Detergent (Selected models)

32 Eco drum clean

33 Draining the washing machine in an emergency

34 Cleaning the detergent drawer and drawer recess

35 Cleaning the debris filter

35 Cleaning the exterior

36 Cleaning the water hose mesh filter

36 Repairing a frozen washing machine

36 Storing your washing machine

CLEANING AND MAINTAINING YOUR WASHING MACHINE

32

TROUBLESHOOTING AND INFORMATION CODES

37

CYCLE CHART

39

APPENDIX

40

39 Cycle chart

40 Fabric care chart

40 Protecting the environment



41 Specifications

setting up your washing machine

Be sure to have your installer follow these instructions closely so that your new washing machine works properly and so that you're not at risk of injury when doing laundry.

CHECKING THE PARTS

Carefully unpack your washing machine, and make sure you've received all of the parts shown below. If your washing machine was damaged during shipping, or if you do not have all of the parts, contact Samsung Customer Service or your Samsung dealer.

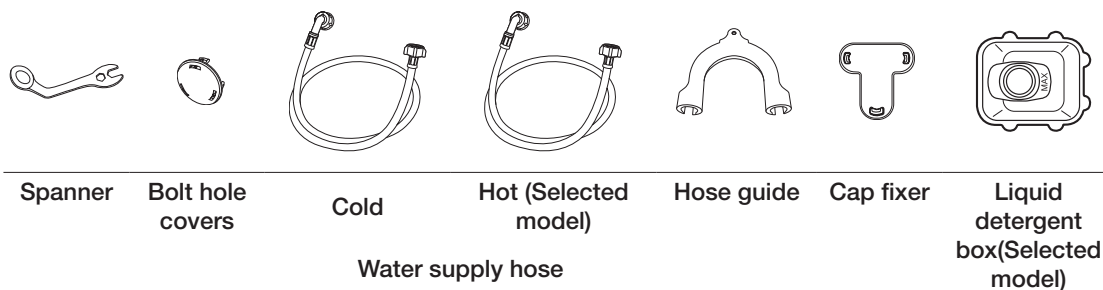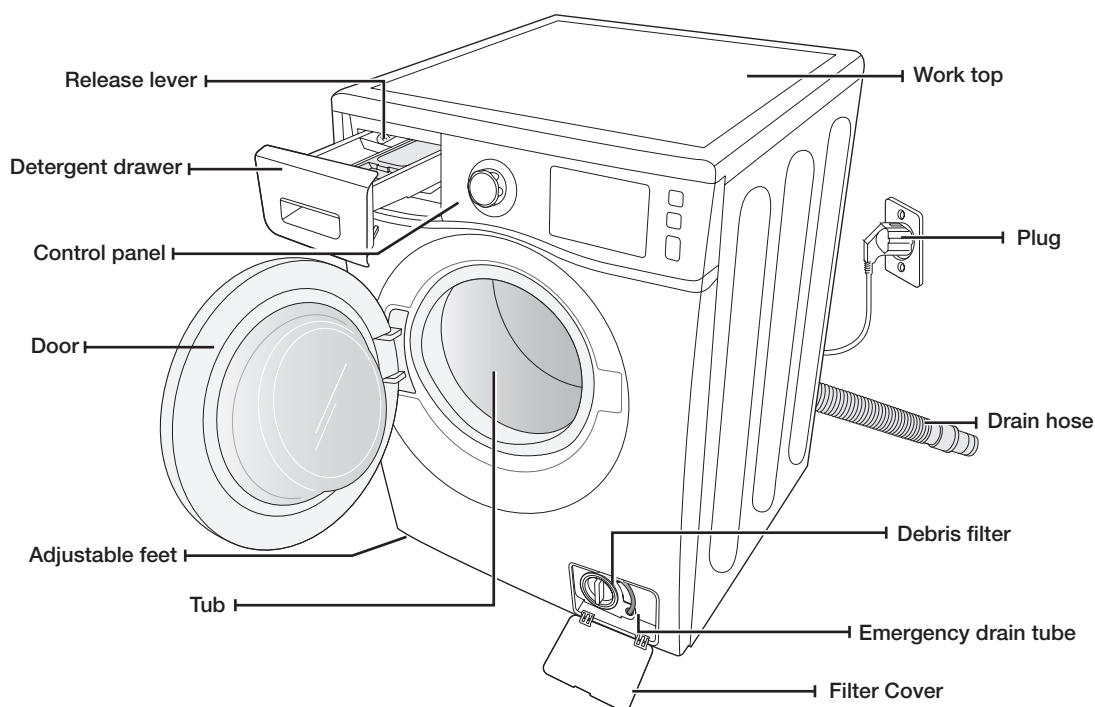

* **Bolt hole covers** : The number of bolt hole covers depends on the model (3~5 covers).

setting up your washing machine

MEETING INSTALLATION REQUIREMENTS

Electrical supply and grounding

To prevent unnecessary risk of fire, electrical shock, or personal injury, all wiring and grounding must be done in accordance with the National Electrical Code ANSI/FNPA, No. 70 Latest Revision and local codes and ordinances. It is the personal responsibility of the appliance owner to provide adequate electrical service for this appliance.



Never use an extension cord.

WARNING Use only the power cord that comes with your washing machine.

When preparing for installation, ensure that your power supply offers:

- AC 230V / 60Hz fuse or circuit breaker
- Individual branch circuit serving only your washing machine

Your washing machine must be grounded. If your washing machine malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.

Your washing machine comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.



Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result electrical shock. Check with a qualified electrician or serviceman if you are unsure if the washing machine is properly grounded. Do not modify the plug provided with the washing machine. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Water Supply

Your washing machine will fill properly when your water pressure is 50 kPa ~ 800 kPa. Water pressure less than 50 kPa may cause water valve failure, not allowing the water valve to shut off completely. Or, it may take the washing machine longer to fill than what the controls allow, resulting in your washing machine turning off. (A fill-time limit, designed to prevent overflows/flooding if an internal hose becomes loose, is built into the controls.)

The water taps must be within 120cm of the back of your washing machine for the provided inlet hoses provided to reach your washing machine.



Most plumbing supply stores sell inlet hoses of various lengths up to 305 cm long.

You can reduce the risk of leaks and water damage by:

- Making water taps easily accessible.
- Turning off taps when the washing machine is not in use.
- Periodically checking for leaks at water inlet hose fittings.



WARNING Before using your washing machine for the first time, check all connections at the water valve and taps for leaks.

Drain

Samsung recommends a standpipe height of 65cm. The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached at the factory.

Flooring

For best performance, your washing machine must be installed on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are contributing factors to vibrations and the tendency for your washing machine to move slightly during the spin cycle.

Never install your washing machine on a platform or poorly supported structure.

Surrounding temperature

Do not install your washing machine in areas where water may freeze, since your washing machine always retains some water in its water valve, pump, and hose areas. Frozen water in the lines can cause damage to belts, the pump, and other components.

Alcove or closet installation

To operate safely and properly, your new washing machine requires minimum clearances of:

Sides – 25 mm

Rear – 50 mm

Top – 25 mm

Front – 465 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

INSTALLING YOUR WASHING MACHINE

STEP 1

Selecting a location



Before you install the washing machine, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation
- Is away from direct sunlight
- Has adequate ventilation
- Will not be freezing (below 0 °C)
- Is away from heat sources such as oil or gas
- Has enough space so that the washing machine doesn't stand on its power cord


setting up your washing machine

STEP 2


Removing the shipping bolts

Before installing the washing machine, you must remove the five shipping bolts from the back of the unit.


1. Loosen all the bolts with the supplied wrench.

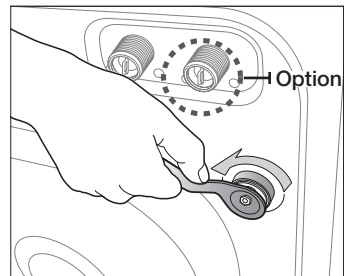

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.

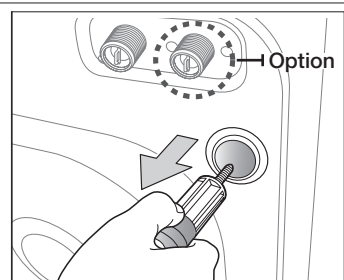


3. Fill the holes with the supplied plastic covers.

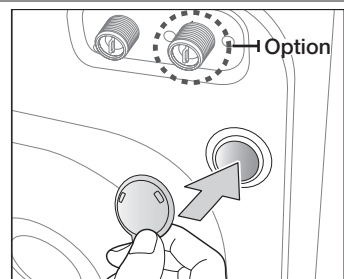

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.

 **WARNING** Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.

-  Insert the cap fixer, (one of the accessories in the vinyl pack), into the hole from which you removed the power cord at the back of the product.

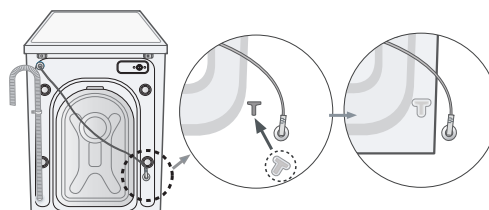


STEP 3

Adjusting the levelling feet


 When installing your washing machine, ensure that the power plug, the water supply and the drain are easily accessible.

1. Slide the washing machine into position.

2. Level your washing machine by turning the leveling feet in and out as necessary by hand.

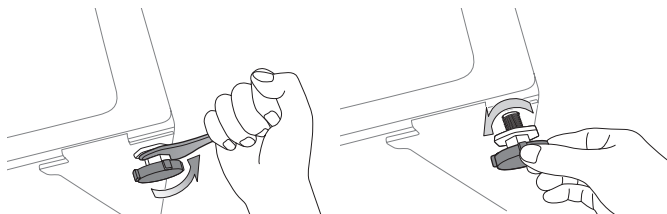

3. When your washing machine is level, tighten the nuts using the wrench supplied with your washing machine.

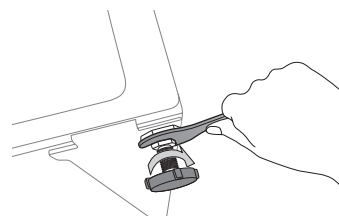

STEP 4


Connecting the water and drain

Connecting the water supply hose

1. Take the L-shaped arm fitting for the cold water supply hose and connect it to the cold water supply intake on the back of the machine. Tighten by hand.

 The water supply hose must be connected to the washing machine at one end and to the water tap at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure hose.

2. Connect the other end of the cold water supply hose to your sink's cold water tap and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

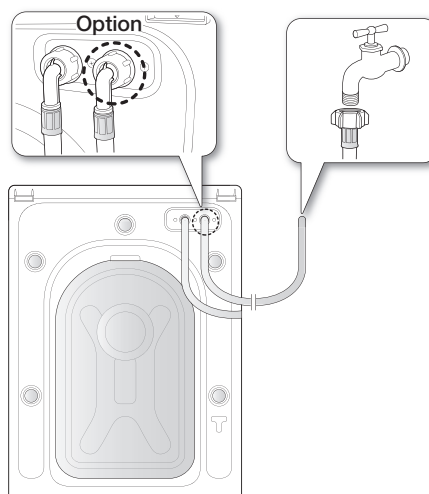


For selected models with an additional hot water intake:

1. Take the red L-shaped arm fitting for the hot water supply hose and connect it to the hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water tap and tighten it by hand.
3. Use a Y-piece if you only want to use cold water.


setting up your washing machine

Connecting the water supply hose (selected models)


1. Remove the adaptor from the water supply hose.

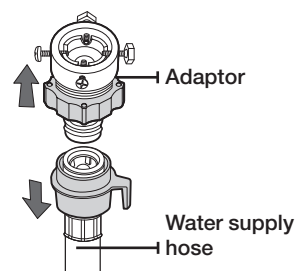

2. First, using a '+' type screwdriver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (2) following the arrow until there is a 5 mm gap.

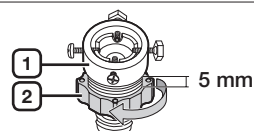


3. Connect the adaptor to the water tap by tightening the screws firmly while lifting the adaptor upwards. Turn part (2) following the arrow and connect (1) and (2).

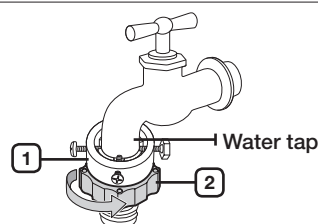


4. Connect the water supply hose to the adaptor. When you release part (3), the hose automatically connects to the adaptor making a 'click' sound.

 After you have connected the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

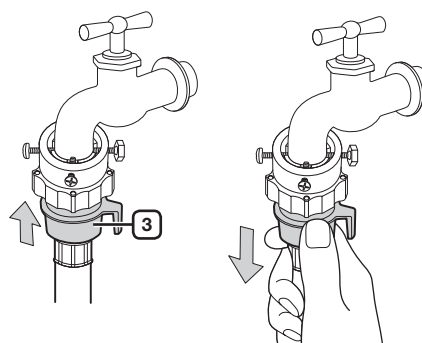


5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washing machine. Screw the hose clockwise all the way in.

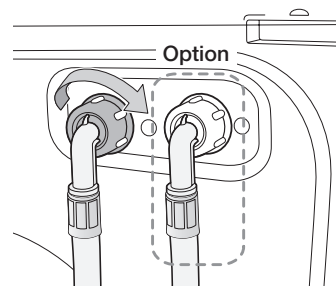


6. Turn on the water supply and ensure that no water leaks from the water valve, tap or adaptor. If there is a water leaks, repeat the previous steps.



Do not use your washing machine if there is a water leak.
WARNING This may cause electric shock or injury.

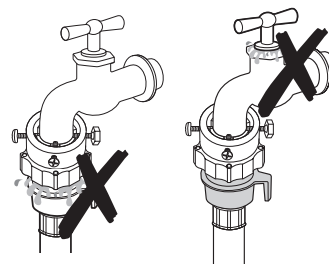

- If the water tap has a screw type tap, connect the water supply hose to the tap as shown.

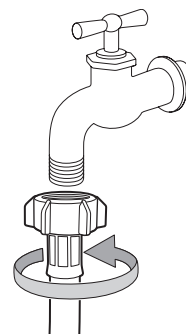


Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the spacing ring before inserting the tap into the adaptor.

Connecting the Aqua Hose (Selected models)

The Aqua Hose was invented for perfect leakage protection. It is attached to the water supply hose and automatically cuts off the water flow if the hose is damaged. It also displays a warning indicator.

- Connect the water supply hose to the tap as shown.

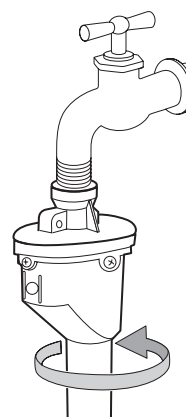


setting up your washing machine

Connecting the drain hose


The end of the drain hose can be positioned in three ways:

1. **Over the edge of a wash basin:** The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

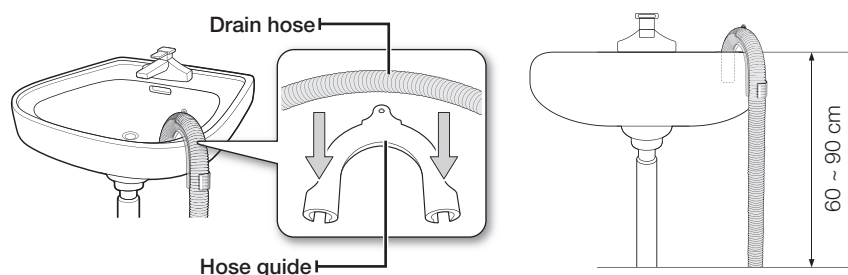

2. **In a sink drain pipe branch:** The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.
3. **In a drain pipe:** We recommend using a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.

-  The standpipe drain requires;
- minimum diameter 5 cm.
 - minimum carry-away capacity 60 liter per minute.

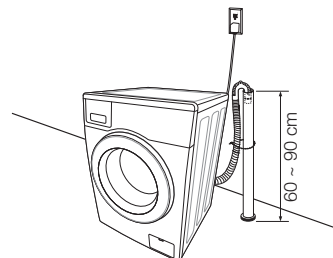

STEP 5

Powering your washing machine

Plug the power cord into a wall sockets, an AC 230V / 60Hz approved electrical outlet protected by a fuse or circuit breaker. (For more information on electrical and grounding requirements, see page 14.)

washing a load of laundry


With your new Samsung washing machine, the hardest part of doing laundry will be deciding which load to wash first.

WASHING FOR THE FIRST TIME

 Before washing laundry for the first time, you must run a complete empty cycle (i.e. no laundry).

1. Press the **Power** button.
2. Add a little detergent to the detergent compartment ① in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the **Start/Pause** button.

 This will remove any water that might be left over in the machine from the manufacturer's test run.

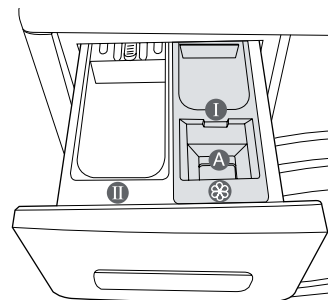

Compartment ①: Detergent for prewash, or starch.

Compartment ②: Detergent for the main wash, water softener, pre-soaking agent, bleach and stain removal product.

 To use liquid detergent, use the liquid detergent box (refer to page 31 of the manual for the corresponding model). Do not add powdered detergent into the liquid detergent box.

Compartment *: Additives, e.g. fabric softener or former (fill no higher than lower edge (MAX) of "A")

BASIC INSTRUCTIONS

1. Load your laundry into the washing machine.

 **WARNING** Do not overload the washing machine. To determine the load capacity for each type of laundry, refer to the chart on page 30.

-  • Make sure that laundry is not caught in the door, as this may cause a water leak.
- Washing detergent may remain in the front rubber part of the washer after a wash cycle. Remove any remaining detergent, as they may cause a water leak.
- Do not wash water-proofed items.

2. Close the door until it latches.

3. Turn the power on.

4. Add detergent and additives to the dispenser drawer.


5. Select the appropriate cycle and options for the load.

The Wash Indicator light will illuminate and the estimated cycle time will appear in the display.

6. Press the **Start/Pause** button.

washing a load of laundry

USING THE CONTROL PANEL

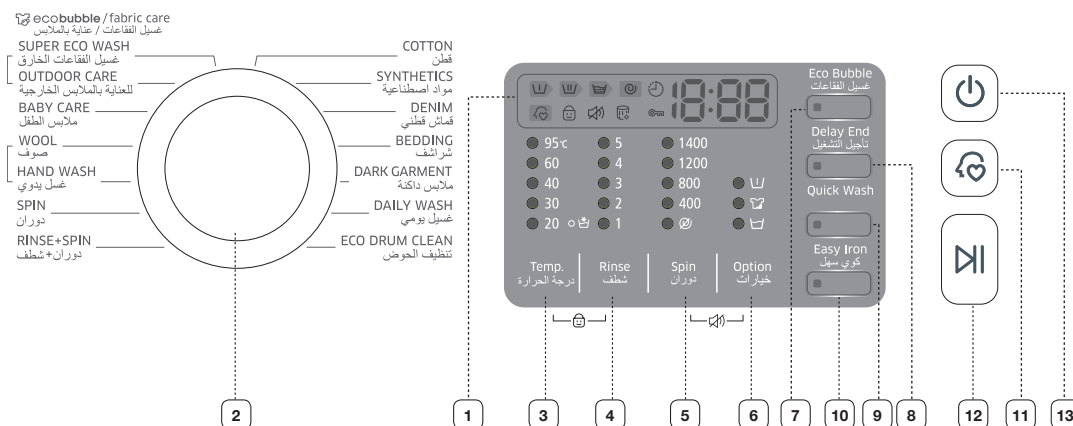

1 DIGITAL GRAPHIC DISPLAY

Displays the remaining wash cycle time, all cycle information, and error messages.

Select the tumble pattern and spin speed for the cycle.

For detailed information, refer to "Washing clothes using the cycle selector" (see page 28) .

COTTON - For averagely or lightly soiled cotton, bed linen, table linen, underwear, towels, shirts, etc.

SYNTHETICS - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends.

DENIM - A higher water level in the main wash and extra rinse ensure that no washing powder remains that may mark your clothing.

BEDDING - For bed spread, bed sheet, duvet cover etc.

Wash under 2 kg and only 1 kind of bedding to achieve the best result.

DARK GARMENT - Additional rinses and reduced spinning ensure that your favourite dark clothes are washed gently and rinsed thoroughly.

DAILY WASH - Use for everyday items such as underwear and shirts. Short programme for test institutes.

ECO DRUM CLEAN - Use for drum cleaning. It cleanses dirt and bacteria of drum. Regular use (after every 40 washes) is recommended. No detergent or bleach needed.

SUPER ECO WASH - Low temperature Eco Bubble ensures that you achieve perfect wash results while allowing effective energy saving.

OUTDOOR CARE - Use for outdoor wear such as mountain clothes, skiwear, and sports wear. Fabrics include functional technology finishes and fibers such as spandex, stretch, and micro-fiber.

BABY CARE - High temperature wash and extra rinses ensure that no washing powder remains to mark your thin clothes.

WOOL - Only for machine-washable wool. A load should be less than 2.0 kg.

2 CYCLE SELECTOR

	- The wool course washes the laundry using gentle cradling actions. During the wash, the gentle cradling and soaking actions are continued to protect the wool fibers from shrinkage / distortion and for a super gentle clean. This stop operation is not a problem. - Neutral detergent is recommended for wool course, for improved washing results and for improved care of the wool fibers. HAND WASH - A very light wash cycle as gentle as a hand wash. SPIN - Performs an additional spin cycle to remove more water. RINSE + SPIN - Use for a load that needs rinsing only or to add rinse-added fabric softener to a load.		
3 TEMPERATURE SELECTION BUTTON	Press this button repeatedly to cycle through the available water temperature options: (☼) (Cold: all lamp turn off), 20 °C, 30 °C, 40 °C, 60 °C and 95 °C).		
4 RINSE SELECTION BUTTON	Press this button to add additional rinse cycles. The maximum number of rinse cycles is five.		
5 SPIN SELECTION BUTTON	Press the button repeatedly to cycle through the available speeds for the spin cycle. <table border="1"> <tr> <td>WF702U4/WF700U4</td><td>All Lamp Turn Off, ☼, 400, 800, 1200, 1400 rpm</td></tr> </table> “No spin ☼” - The laundry remains in the drum and no spin cycle is performed after the final drain. “Rinse hold (All Lamp Turn Off)” -The laundry remains soaking in the final rinse water. Before the laundry can be unloaded, either a Drain or Spin cycle must be performed.	WF702U4/WF700U4	All Lamp Turn Off, ☼, 400, 800, 1200, 1400 rpm
WF702U4/WF700U4	All Lamp Turn Off, ☼, 400, 800, 1200, 1400 rpm		
6 OPTION SELECTION BUTTON	Press this button repeatedly to cycle through the wash options: ☼ (Soak) → ☼ (Intensive) → ☼ (Pre Wash) → ☼ (Soak) + ☼ (Intensive) → ☼ (Soak) + ☼ (Pre Wash) → ☼ (Intensive) + ☼ (Pre Wash) → ☼ (Soak) + ☼ (Intensive) + ☼ (Pre Wash) → (off) “Pre Wash”: Choose this option to select pre-wash. Pre-wash is only available with: Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash, Super Eco Wash, Baby Care. “Intensive”: Press this button when the laundry is heavily soiled and needs to be washed intensively. The cycle time is increased for each cycle. “Soak”: Use this option to effectively remove stains from your laundry by soaking your laundry. - The Soak function is performed 13 minutes into the wash cycle. - The Soak function continues for 30 minutes with six cycles, where one cycle is a soak cycle that spins for 1 minute and stands still for 4 minutes. - The Soak function is only available for the following wash programs: Cotton, Synthetics, Denim, Bedding, Daily Wash, Super Eco Wash, Baby Care.		

washing a load of laundry

7 ECO BUBBLE SELECTION BUTTON	Eco Bubble selection is turned on as a default. Press the Eco Bubble option button once to deselect and the Bubble Generator OFF (shown on the panel), press it again to turn the function back ON. - Some wash cycles must have Eco Bubble option ON (will show on the panel, and the Generator will turn on automatically). - Other wash cycles do not need this option and automatically turn the Generator OFF. - On many cycles, you can manually adjust this option, which will visibly affect wash time on the panel to achieve results (please see page 27 for more information).
8 DELAY END SELECTION BUTTON	Press this button repeatedly to cycle through the available Delay End options (from 3 hours to 19 hours in one hour increments). The hour displayed indicates the time when the wash cycle will be finished.
9 QUICK WASH SELECTION BUTTON	For lightly soiled garments and less than 2kg laundry that you require quickly. It takes about minimum 15 minute, but can vary from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilized detergent unbalanced load, fluctuation in the electricity supply and extra options selected. Press this button repeatedly to choose cycle time: 15min → 20min → 30min → 40min → 50min → 60min → Off  WARNING Powdered/Liquid detergent should be under 20g(for 2kg load) or detergent may remain on the clothes.
10 EASY IRON SELECTION BUTTON	Press this button to select easy iron. use this option to prepare your laundry so that it can be easily ironed.
11 MY CYCLE SELECTION BUTTON	Choose your favorite cycle including temperature, spin, soil level, option, etc.
12 START/PAUSE SELECTION BUTTON	Press to pause and restart a cycle.
13 POWER BUTTON	Press it once to turn your washing machine on, press it again to turn your washing machine off. If the washing machine is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.


Child lock

The Child Lock function allows you to lock the buttons so that the wash cycle you've chosen can't be changed.

Activating/Deactivating

If you want to activate or deactivate the Child Lock function, press the **Temp.** and **Rinse** buttons at the same time for 3 seconds. The "Child Lock" icon will be lit when this feature is activated.

When the Child Lock function is activated, only the **Power** button works. The Child Lock function remains on even after the power is turned on and off or after the disconnecting and reconnecting the power cord.

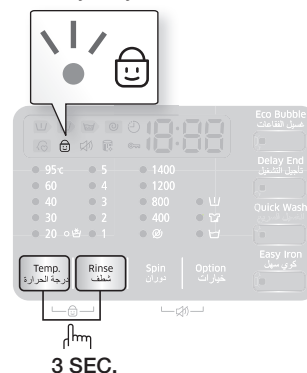


Sound off

The Sound Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivating

If you want to activate or deactivate the Sound Off function, press the **Spin** and **Option** buttons at the same time for 3 seconds. The "Sound Off" icon will be lit when this feature is activated.

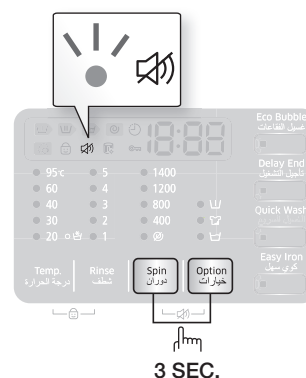

Delay end

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 3 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the wash will be finished.

1. Manually or automatically set your washing machine according to the type of laundry you are washing.
2. Press the **Delay End** button repeatedly until the delay time is set.
3. Press the **Start/Pause** button. The "Delay End" icon will be lit, and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay End function, press the **Power** button and then turn the washing machine on again.

washing a load of laundry

My cycle

Allows you to activate your custom wash (temperature, spin, soil level, etc.) with one button convenience.

By pushing the **My Cycle** button, press the My Cycle button to load and use the saved My Cycle options. The "My Cycle" light will indicate activation. Also, the chosen course and option lights will flicker.

You can set all options as follows in the My Cycle mode.

1. Turn the water supply on.
2. Press the **Power** button.
3. Select cycle using the **Cycle Selector**.
4. After cycle selection, set each option.

 See the "Cycle Chart" on page 39 for available option settings with each cycle.

5. You can then store the selected cycle and options by pressing and holding the **My Cycle** button for longer than 3 seconds in My Cycle mode. The cycle and options you select will be displayed the next time you choose the My Cycle function.

 You can change the My Cycle settings by repeating the same process above. The last used setting will be displayed the next time you choose the My Cycle function.

 If you press My Cycle and release it within 3 seconds, the previously saved course and options appear. If you press and hold My Cycle for 3 second or longer, the currently set course and options are saved and the LED blinks for 3 seconds.

Eco Bubble

Eco Bubble allows detergent to distribute evenly and penetrate fabrics faster and deeper.

 The bubble function is available in all courses except for Eco Drum Clean course and the function availability is as follows.

Course	Bubble function	Canceling the bubble function
Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash	Available	Available
Super Eco Wash, Outdoor Care, Baby Care, Wool, Hand Wash		Not available
Eco Drum Clean	Not available	-


- A different bubble function may be applied depending the course.

 Eco Bubble selection is default. Press it once to deselect bubble option, press it again to select bubble option.

1. Open the door, place the laundry inside the wash tub and close the door.
2. Press the **Power** button.
3. Select a function.

4. Place the appropriate amount of detergent and fabric softener into the corresponding compartments depending on the amount of laundry and close the detergent drawer.
 - Add the appropriate amount of detergent into the detergent compartment ①, and add the fabric softener to softener compartment ② just under the fiber softener base line (MAX) of "A"

- When the Prewash course is selected, add detergent into the prewash compartment ③ as well.
- To use liquid detergent, leave the liquid detergent box in the drawer (refer to "Liquid Detergent" section on page 31).

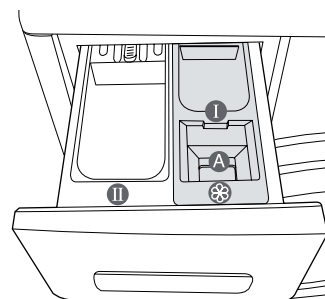

 Do not add powdered detergent into the liquid detergent box.

5. Press the Start/Pause button.
 - Press the **Start/Pause** button to start the wash.
 - The amount of the laundry is automatically detected and the laundry is washed.
 - Once a washing machine operation begins, you cannot add or select the bubble function.

- 
- Enough bubbles are generated with the specified amount of detergent.
 - Please clean the Debris filter frequently. Periodic cleaning helps generate sufficient bubbles.
 - Depending on the detergent and the laundry, the bubbles may be absorbed and seem like a small quantity.
 - Although bubbles are generated once the wash begins, it may take several minutes for users to see them.

washing a load of laundry

Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Turn on your sink's water tap.
2. Press the **Power** button on the washing machine.
3. Open the door.
4. Load the articles loosely into the drum one at a time, without overfilling it.
5. Close the door.
6. Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
-  Pre-wash is only available when selecting the Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash, Super Eco Wash, Baby Care cycles. It is only necessary if your clothing is heavily soiled.
7. Use the **Cycle Selector** to select the appropriate cycle according to the type of material: Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash, Eco Drum Clean, Super Eco Wash, Outdoor Care, Baby Care, Wool, Hand Wash. The relevant indicators will illuminate on the control panel.
8. At this time, you can control the wash temperature, the amount of rinses, the spinning speed, and the delay time by pressing the appropriate option button.
9. Press the **Start/Pause** button and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option

Within 5 minutes of starting a wash, it is possible to add/remove laundry items.

1. Press the **Start/Pause** button to unlock the door.
-  The door cannot be opened when the water is too HOT or the water level is too HIGH.
2. After closing the door, press the **Start/Pause** button to restart the wash.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the door.
2. Remove laundry.

Washing clothes manually

You can wash clothes manually without using the Cycle Selector.

1. Turn the water supply on.
2. Press the **Power** button on the washing machine.
3. Open the door.
4. Load the articles loosely into the drum one at a time, without overfilling it.
5. Close the door.
6. Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
7. Press the **Temp.** button to select the temperature. (☼ (Cold: all lamp turn off), 20 °C, 30 °C, 40 °C, 60 °C, 95 °C)
8. Press the **Rinse** button to select the required number of rinse cycles.
The maximum number of rinse cycles is five.
The wash duration is increased accordingly.
9. Press the **Spin** button to select the spin speed.
(☼ : **No Spin**, All Lamp Turn Off : **Rinse Hold**)
10. Press the **Delay End** button repeatedly to cycle through the available Delay End options (from 3 hour to 19 hours in one hour increments). The hour displayed indicates the time at which the wash will be finished.
11. Press the **Start/Pause** button and the machine will begin the cycle.

LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash.



Always check the Care label on clothing before washing.

Sort and wash your laundry according to the following criteria:

- Care Label: Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayons.
- Colour: Divide whites and colours. Wash new colour items separately.
- Size: Placing items of different sizes in the same load will improve the wash action.
- Sensitivity: Wash delicate items separately, using the Delicate wash cycle for pure, new woollen items, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets

Before each wash, empty all the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal objects.

Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If zips of pants and jackets are open while washing, the spin basket may be damaged. Zips should be closed and fixed with a string before washing.

Clothing with long strings may become entangled with other clothes damaging them. Be sure to fix the strings before starting the wash.

Prewashing cotton

Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, prewash with a protein-based detergent.

washing a load of laundry

Determining the load capacity


Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

Fabric Type	Load Capacity
Model	WF702U4/WF700U4
Cotton - average/lightly soiled - heavily soiled	7.0 kg
Synthetics	2.5 kg
Denim	3.0 kg
Bedding	2.0 kg
Dark Garment	3.0 kg
Wool	2.0 kg

- When the laundry is unbalanced ("UE" lights up on the display), redistribute the load. If the laundry is unbalanced, the spin efficiency may be degraded.
- When washing Bedding or Duvets, the wash time may be lengthened or the spin efficiency may be degraded.
- For Bedding or Duvets, the recommended load capacity is 2.0(kg) or less.

Make sure to insert brassieres (water washable) into a laundry net (to be purchased additionally).

- The metal parts of the brassieres may break through the material and damage the laundry. Therefore make sure to place them inside a fine laundry net.
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.

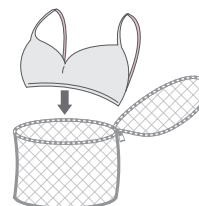

Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and cause an accident resulting in injury.

DETERGENT AND ADDITIVES INFORMATION

Which detergent to use

The type of detergent you should use is based on the type of fabric (cotton, synthetics, items, Hand Wash For Wool), colour, wash temperature, and degree of soiling. Always use "low suds" laundry detergent, which is designed for automatic washing machines.

Follow the detergent manufacturer's recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.

- Do not use detergent that has hardened or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.

Please note the following when using the Wool course.

- Use a neutral liquid detergent for wool only.
- When using a powder detergent, it may remain on the laundry and cause damage to the material (wool).

Detergent drawer

Your washing machine has separate compartments for dispensing detergent and fabric softener. Add all laundry additives to the correct compartment before starting your washing machine.

 Do NOT open the detergent drawer while your washing machine is running or you might be exposed to hot water or steam.

1. Pull out the detergent drawer on the left side of the control panel.



2. Add the recommended amount of laundry detergent directly into the detergent compartment ① before starting your washing machine.

 To use liquid detergent, use the liquid detergent box (refer to "Liquid Detergent" for the corresponding model).

- Do not add powdered detergent into the liquid detergent box.

3. Add the recommended amount of fabric softener into the softener compartment ② if required. DO NOT exceed the MAX FILL (A) line.

 **CAUTION** Do NOT add any powder/liquid **detergent** to the softener compartment (②).

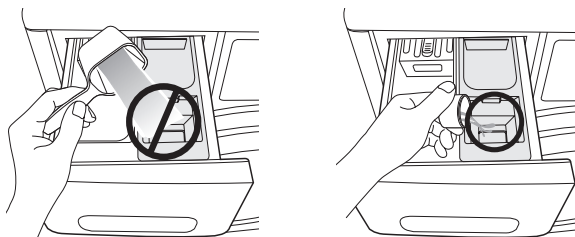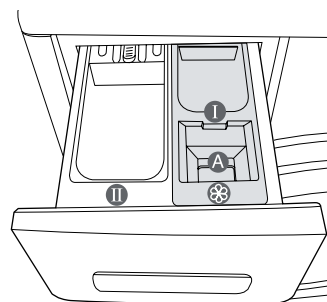


4. When using the Prewash option, add the recommended amount of laundry detergent into the prewash compartment ③.

 When washing large items do NOT use the following detergent types.

- Tablet and capsule type detergents
- Detergents using a ball and net

 Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked.)


 Be careful that the fabric softener does not overflow, when you close the detergent drawer after adding fabric softener into the rinse detergent compartment.

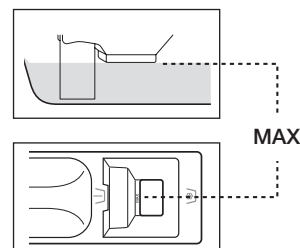

Liquid Detergent (Selected models)

To use liquid detergent, place the liquid detergent box into the main wash section of the detergent drawer and pour liquid detergent into the liquid detergent box.

-  DO NOT fill above the MAX line.
- When using powdered detergent, remove the liquid detergent box from the detergent drawer. Powdered detergent will not dispense with liquid detergent box.
- After a wash, some liquid may remain in the detergent drawer.

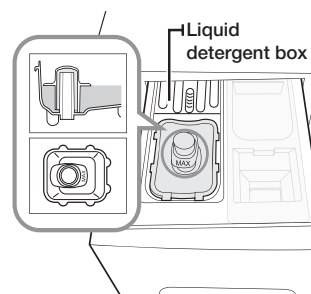

cleaning and maintaining your washing machine

Keeping your washing machine clean improves its performance, wards off unnecessary repairs, and lengthens its life.

ECO DRUM CLEAN

This course is a self-cleaning course that removes mold that may occur inside the washing machine.


1. Press the **Power** button.
2. Turn the **Cycle Selector** to the ECO Drum Clean course.
 - You can only use the Delay End function.
 - The water temperature during the ECO Drum Clean is set to 70 °C.




Due to the features of the washing machine, the water temperature is set to 70 °C during the Eco Drum Clean cycle, but the display can only show 60 °C on the control panel.

You cannot change the temperature.

- It will auto set cotton 30 °C middle water level program when cloth is put in.

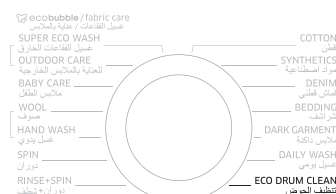

3. Place the appropriate amount of cleansing agent into the detergent compartment ⑪ and close the detergent drawer (when cleaning the drum using a cleansing agent).
 - Be sure to use the recommended cleansing agent for cleaning the drum.
 - There are powder-type and liquid-type drum cleansing agents. The liquid-type cleaning agent is only available with liquid detergent box (option).

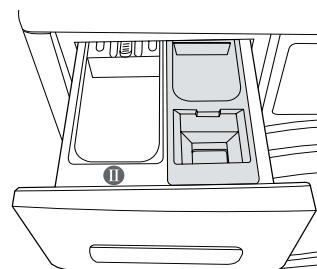


4. Press the **Start/Pause** button.
 - If you press the **Start/Pause** button, the ECO Drum Clean course begins.
- Using the ECO Drum Clean course, you can clean the drum without using a cleansing agent.
 - Never use the ECO Drum Clean course when laundry is in the washing machine. This may result in damage to the texture or a problem with the washing machine.
 - **In the ECO Drum Clean course, never use normal detergent.**
 - **Use only 1/10 of the amount of the drum cleansing agent recommended by the cleansing agent manufacturer.**
 - Since using a chlorine bleaching agent may discolour the product, be sure to use only oxygen bleaching agents.
 - Powder-type cleansing agent: Use a [powder-type bleaching agent] or a [cleansing agent for drum cleaning only].
 - Liquid-type cleansing agent: Use a [liquid-type oxygen bleaching agent] or a [cleansing agent for drum cleaning only].



CAUTION

The ECO Drum Clean Auto Alarm Function


- If the “ECO Drum Clean” indicator on the display is lit after a wash, it indicates that tub (drum) cleaning is required. In this case, remove the laundry from the washing machine, turn the power on, and clean the drum by performing the ECO Drum Clean course.
- If you do not perform the ECO Drum Clean course, the “ECO Drum Clean” indicator on the display is turned off. However, the “ECO Drum Clean” indicator on the display and the lamp on the Cycle Selector are turned on again after two washes are performed. However, this will not result in a problem with the washing machine.
- Although generally, the ECO Drum Clean Auto Alarm appears once a month or so, the frequency may differ depending on the number of times the washing machine is used.

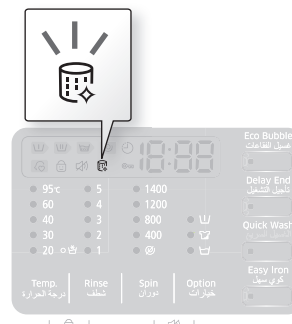


- **In case of the alarm, please also clean the debris filter (refer to “Cleaning the debris filter” section on page 35). Otherwise the performance of the bubble function may lower down.**

DRAINING THE WASHING MACHINE IN AN EMERGENCY

1. Unplug the washing machine from the power supply.
2. Open the filter cover using a coin or a key.

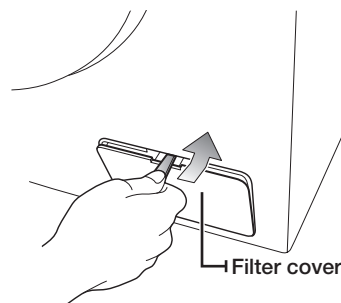


3. Pull forward the emergency drain tube to separate it from the guide hook.

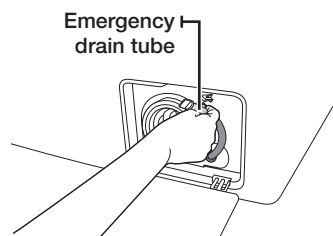

4. Take off the emergency drain cap closing the emergency drain tube.
5. Allow all the water to flow into a bowl.

- Remain water maybe more than you expected. Prepare larger bowl.


6. Re-attach the cap to the emergency drain tube and then fix the emergency drain tube to the guide hook.
7. Replace the filter-cover.

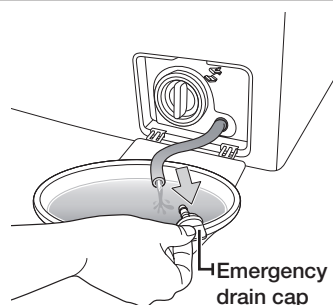


cleaning and maintaining your washing machine

CLEANING THE DETERGENT DRAWER AND DRAWER RECESS


1. Press the release lever on the inside of the detergent drawer and pull the drawer out.
2. Remove the liquid detergent divider from the detergent drawer

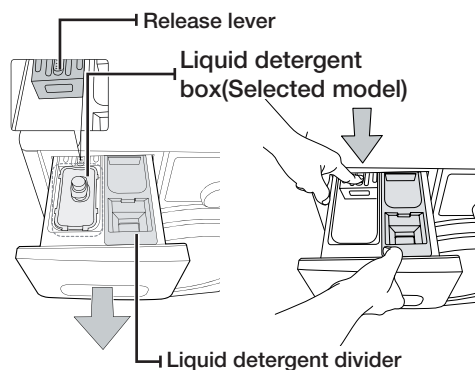

3. Wash all parts under running water.

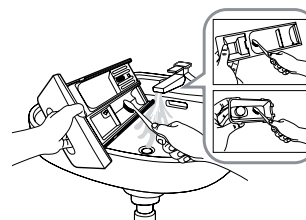

4. Clean the drawer recess with an old toothbrush.
5. Replace the liquid detergent divider by pushing it firmly into the drawer.
6. Push the drawer back into place.
7. To remove any remaining detergent, perform a rinse cycle without any laundry in the drum.

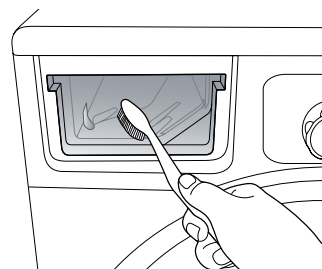


CLEANING THE DEBRIS FILTER

We recommend cleaning the debris filter 5 or 6 times a year, or when the error message of “5E” is displayed. (Refer to “Draining the washing machine in an emergency” in the previous page.)




CAUTION Before cleaning the debris filter, make sure to unplug the power cord.

1. Remove the remaining water first (refer to “Draining the washing machine in an emergency” on page 33.)
2. Open the filter cover by using a key or coin.
3. Unscrew the emergency drain cap by turning it to the left and drain off all the water.
4. Unscrew the debris filter cap.

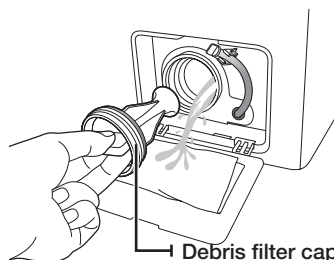

5. Wash any dirt or other material from the debris filter. Make sure the drain pump propeller behind the debris filter is not blocked.
6. Replace the debris filter cap.
7. Replace the filter cover.

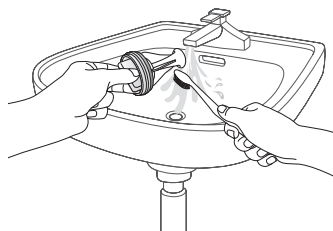

CAUTION Do not open the debris filter cap while the machine is running or hot water may flow out.



- Make sure to replace the filter cap after the filter cleaning. If the filter is out of the machine, your washing machine may malfunction or leak water.
- The filter should be fully assembled after the filter cleaning.

CLEANING THE EXTERIOR


1. Wipe the washing machine surfaces, including the control panel, with a soft cloth using a nonabrasive household detergent.
2. Use a soft cloth to dry the surfaces.
3. Do not pour water onto the washing machine.

cleaning and maintaining your washing machine

CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least once a year, or when the error message of “4E” is displayed:

1. Turn off the water supply to the washing machine.
2. Unscrew the hose from the back of the washing machine. To prevent water from gushing out due to the air pressure in the hose, cover the hose with a cloth.
3. Gently pull out the mesh filter from the end of the hose using a pair of pliers and rinse it under water until clean. Also clean inside and outside the threaded connector.
4. Push the filter back into place.
5. Screw the hose back onto the washing machine.
6. Make sure the connections are watertight and turn on the tap.

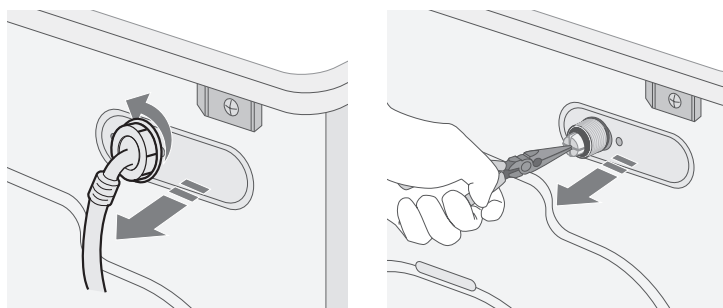

REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:

1. Unplug the washing machine.
2. Pour warm water over the tap to loosen the water supply hose.
3. Remove the water supply hose and soak it in warm water.
4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
5. Reconnect the water supply hose to the water tap and check if the water supply and drain are operating normal.

STORING YOUR WASHING MACHINE

If you need to store your washing machine for an extended time, it's better to drain and disconnect it. Washing machines can be damaged if water is left in the hoses and internal components before storage.

1. Select the 15'Quick Wash cycle and add bleach to the bleach compartment. Run your washing machine through the cycle without a load.
 2. Turn the water taps off and disconnect the inlet hoses.
 3. Unplug your washing machine from the electrical outlet, and leave your washing machine door open to allow air to circulate inside the tumbler.
-  If your washing machine has been stored in below-freezing temperatures, allow time for any leftover water in your washing machine to thaw out before using it.

troubleshooting and information codes

CHECK THESE POINTS IF YOUR WASHING MACHINE...

PROBLEM	SOLUTION
Will not start	• Make sure your washing machine is plugged in. • Make sure the door is firmly closed. • Make sure the water source tap(s) are turned on. • Make sure to press the Start/Pause button.
Has no water or not enough water	• Turn the water tap on fully. • Make sure the water source hose is not frozen. • Straighten the water intake hoses. • Clean the filter on the water intake hose.
Has detergent remains in the detergent drawer after the wash cycle is complete	• Make sure your washing machine is running with sufficient water pressure. • Make sure the detergent is added to the center of the detergent drawer.
Vibrates or is too noisy	• Make sure your washing machine is on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure your washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	• Straighten the drain hose. Eliminate kinked hoses. • Make sure the debris filter is not clogged.
Door is locked shut or will not open.	• Make sure all the water in your drum is drained out. • Make sure the door lock light is off. Door lock light will off after drained.
The drain pump generates a strange noise.	• Check if the drain pump is blocked by flocks or dirt . Clean the debris filter to abate noise.

If the problem persists, contact your local Samsung Customer Service.

troubleshooting and information codes

INFORMATION CODES

When your washing machine malfunctions, you may see an information code on the display. If that happens, check this table and try the suggested solution before calling Customer Service.

CODE SYMBOL	SOLUTION
dE	• Make sure the door is firmly closed. • Make sure that laundry is not caught in the door.
4E	• Make sure the source water tap is turned on. • Check the water pressure. • Clean the mesh filters of water hose.  When the washer displays the "4E" code, the washer do draining for 3 minutes. During this time, the Power button is inoperative.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly.
UE	• The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory and an "UE" error message will be shown in the display window.
cE/3E	• Call the after-sales service.
Sud	• This occurs when too much foaming is detected. It is also displayed while foaming is removed. When the removal is finished, the normal cycle proceeds.(This is one of the normal operations. It is an error for preventing non-sensing faults.)
Uc	• If the voltage of the supplied power is instable, the washing machine will be paused to protect its electric devices. • If the correct voltage is supplied, the cycle will resume automatically.

For any codes not listed above, or if the suggested solution doesn't fix the problem, call your Samsung Service Centre or local Samsung dealer.

cycle chart

CYCLE CHART

(● user option)

PROGRAM	Max load(kg)	DETERGENT			Max Temp (°C)	Spin Speed(MAX) rpm
	WF702U4/WF700U4	Pre-wash	wash	Softener		WF702U4/WF700U4
Cotton	7.0	●	yes	●	95	1400
Synthetics	2.5	●	yes	●	60	1200
Denim	3.0	●	yes	●	60	800
Bedding	2.0	●	yes	●	40	800
Dark Garment	3.0	●	yes	●	40	1200
Daily Wash	2.0	●	yes	●	60	1400
Eco Drum Clean	-	-	yes	-	70	400
Super Eco Wash	3.0	●	yes	●	40	1200
Outdoor Care	2.0	-	yes	●	40	1200
Baby Care	3.0	●	yes	●	95	1400
Wool	2.0	-	yes	●	40	800
Hand Wash	2.0	-	yes	●	40	400

PROGRAM	Pre Wash	Intensive	Soak	Delay End	Quick Wash	Easy Iron	My Cycle
Cotton	●	●	●	●	●	●	●
Synthetics	●	●	●	●	-	●	●
Denim	●	●	●	●	-	●	●
Bedding	●	●	●	●	-	●	●
Dark Garment	●	●	-	●	-	●	●
Daily Wash	●	●	●	●	-	●	●
Eco Drum Clean	-	-	-	●	-	-	-
Super Eco Wash	●	●	●	●	-	●	●
Outdoor Care	-	-	-	●	-	-	●
Baby Care	●	●	●	●	-	●	●
Wool	-	-	-	●	-	-	●
Hand Wash	-	-	-	●	-	-	●

1. A cycle with a prewash takes approx. 18 minutes longer.
2. The cycle duration data has been measured under the conditions specified in Standard IEC 60456 / EN 60456.
3. Cotton60°C+Intensive+Eco Bubble are programs according to EN60456.
4. Course time in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.
5. When the Intensive Wash function is selected, the cycle time is increased for each cycle.
6. The energy label specifications have been determined by using the following program according to SASO 2692 and SASO 2693.
 - The program for WF70***** is cotton 60°C + intensive + rinse 2 times + 1200rpm.

appendix

FABRIC CARE CHART

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing, and dry cleaning when necessary. The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundering problems.

 Resistant material	 Can be ironed at 100 °C max
 Delicate fabric	 Do not iron
  Item may be washed at 95 °C	 Can be dry cleaned using any solvent
  Item may be washed at 60 °C	 Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
  Item may be washed at 40 °C	 Dry clean with aviation fuel, pure alcohol or R113 only
  Item may be washed at 30 °C	 Do not dry clean
 Item may be hand washed	 Dry flat
 Dry clean only	 Can be hung to dry
 Can be bleached in cold water	 Dry on clothes hanger
 Do not bleach	 Tumble dry, normal heat
 Can be ironed at 200 °C max	 Tumble dry, reduced heat
 Can be ironed at 150 °C max	 Do not tumble dry

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufacturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

SPECIFICATIONS

The manufacturer's name and/or his trademark		SAMSUNG
Country of origin		Made in China
The type number		WF702U4/WF700U4
Kind of washing machine		Automatic electric Washing machine
Washing system		Washing machine with drum system
Rated voltage (volts)		230V~
Rated frequency (Hz)		60Hz
Rated power input (watt or kW)	Rated power input	2100 W
	Wash heater	2000 W
	Main motor	350 W
	Pump motor	35 W
	Circulation motor	35 W
Standard (rated) washing capacity (kg)		7.0 kg
Standard quantity of used water (litre)		65 L
Washing machine class		Class I
IP number		IPX4
The maximum permissible inlet water pressure		800 kPa
The minimum permissible inlet water pressure		50 kPa
Water volume		47 L
Dimensions		W600 x D550 x H850 (mm)
Net weight		61 kg
Spin revolutions		1400 rpm

- The washing machine shall not be installed at a humid place.
- The wringer must be switched off when not in use.
- The washing machine must not be operated by children.
- The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.
- The hands shall not be inserted into running water extracting tub.
- The washing machine whose lid can be opened during water extraction, that if it takes 15 s or more for complete stop of water-extracting chamber tub such a case should be understood as a trouble.

memo

memo



QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
SAUDI ARABIA	920021230	www.samsung.com/sa/support www.samsung.com/sa_en/support (English)

Code No. DC68-02917F-01_EN

WF702U4BK**
WF700U4BK**



غسالة كهربية أوتوماتيكية

دليل المستخدم

Planet First 100%
Recycled Paper

تم إنتاج هذا الدليل باستخدام ورق مُعاد تدويره بنسبة ١٠٠٪.

إمكانيات هائلة

نشكرك على شراء هذا المنتج من Samsung.

SAMSUNG



كود رقم، DC68-02917F-01_AR

مميزات الغسالة الجديدة من Samsung

ستغير هذه الغسالة الجديدة رؤيتك لعملية الغسل. تتميز غسالة Samsung بوجود كافة الميزات التي تحول المهام غير المرغوبة إلى شيء ممتع. بدءاً من سعتها ذات الحجم الفائق وحتى استهلاكها الاقتصادي للطاقة.

• توفير الطاقة

يوفر هذا الطراز استهلاكاً أوفر للطاقة مقارنة بالغسالة من الفئة A القياسية وذلك بفضل "نظام مولد الفقاعات" المتميز و"محرك التشغيل الهادئ العكسي من Samsung".

• ضوضاء واهتزازات أقل

تؤدي غسالة سامسونج عملها مع أدنى مستويات الضوضاء وأقل مستويات الاهتزاز مع تقنية التحكم الذكية التي تتيح الحفاظ على أدنى مستويات الاهتزاز. وبالتالي، تحافظ الأسطوانة على التوازن المثالي.

• Eco Bubble Wash (غسل بالفقاعات صديق البيئة)

يوفر نظام Eco Bubble Wash الغسل بالفقاعات صديق البيئة الفعال من Samsung نظافة أفضل مع عناية متقدمة بالأقمشة. يُسمح نظام Eco Bubble (غسيل الفقاعات) بتوزيع المسحوق بالتساوي ويعمل على تخله داخل الملابس بشكل أسرع وأعمق.

• Quick Wash (الغسيل السريع)

وداعاً لإهدار الوقت! خلال ميزة الغسيل السريع ١٥ دقيقة سيمكنك غسيل الملابس واستخدامها. يساعد برنامج Quick Wash (الغسيل السريع) في توفير الكثير من الوقت، فالآن يمكنك غسيل ما تشاء من الملابس (حتى ٢ كجم) خلال ١٥ دقيقة فقط!

• ECO DRUM CLEAN (تنظيف الحوض)

يساعد استخدام ECO DRUM CLEAN (تنظيف الحوض) في الحفاظ على نظافة الغسالة حتى بدون استخدام أي منظفات أو مبيضات، حيث يمكنك الحفاظ على نظافة الحاوية ورائحتها مع هذا البرنامج المتخصص للتنظيف.

• BABY CARE (ملابس الطفل)

تتضمن غسالة Samsung برامج غسيل تعمل على حماية ملابس الأطفال ذوي البشرة الحساسة. حيث تم إعداد هذه البرامج لتقليل التهابات البشرة عند الأطفال عن طريق تقليل بقايا مسحوق الغسيل. بالإضافة إلى أن هذه البرامج تصنف الملابس إلى أنواع مختلفة يتم غسلها وفقاً لخصائص كل نوع بحيث يشعر الأطفال بالانتعاش من نظافة الملابس وقتما يرتدونها.

• HAND WASH (غسل يدوي)

يمكنك أن تحظى بعناية خاصة لغسل ملابسك عن طريق تحديد درجة حرارة ملائمة ودورة غسيل هادئة وكمية ماء مناسبة.

• Child Lock (التأمين ضد عبث الأطفال)

تضمن وظيفة Child Lock (التأمين ضد عبث الأطفال) إبقاء الأطفال بعيداً عن الغسالة. وتعمل ميزة الأمان هذه على منع الأطفال من العبث بالغسالة كما تقوم بتنبيهك عند تشغيلها.

• Delay End (تأجيل التشغيل)

تعمل هذه الميزة على تأجيل الدورة حتى ١٩ ساعة بزيادة ساعة واحدة كما تعمل على زيادة الراحة عند استخدام الغسالة لاسيما عندما ترغب في الذهاب للخارج.

• لوحة العرض الرسومية الرقمية

تتميز لوحة العرض الرسومية الرقمية بوضوحها وسهولة استخدامها مما يعمل على تقليل الضوضاء والمقاطعة إلى أدنى حد. وإلى جانب تشغيل لوحة العرض الرسومية الرقمية عملية سهلة، فهي تمكنك من إجراء إعدادات ضبط عملية الغسيل بدقة للحصول على نتائج غسل فائقة.

• الخرطوم المائي ومستشعر التسرب (طرازات محددة)

نظام أمان الماء مصمم بشكل أنيق للغسالات الآلية من Samsung (سامسونج) وتتضمن خرطوم رائع لإيقاف تسرب الماء عند المصدر ومستشعر التسرب في القاعدة. في حال تعرض الخرطوم للكسر أو الكشف عن تسرب للماء، فسيتم تمديد قطعة أسفنجية داخلية لمنع الماء من الحنفية.

يحتوي هذا الدليل على معلومات هامة حول عملية التركيب والاستخدام وصيانة غسالة Samsung الجديدة. ويمكنك الرجوع إليه للتعرف على شكل لوحة التحكم، والتعليمات الخاصة بكيفية استخدام الغسالة، والتلميحات المتعلقة بالوصول إلى أقصى استفادة من أحدث الميزات والإمكانات المتوفرة بها. يرشدك القسم "استكشاف المشاكل وحلها ورموز المعلومات" في صفحة ٣٧ إلى ما يجب عليك فعله في حالة حدوث عطل بالغسالة الجديدة.

معلومات السلامة

تهانينا على شرائك غسالة Samsung ActivFresh™ الجديدة من Samsung. يحتوى هذا الدليل على معلومات هامة حول عملية تركيب الجهاز واستخدامه ورعايته. يرجى قراءة هذا الدليل بعناية لتتمكن من الاستفادة الكاملة من الميزات والفوائد العديدة لغسالتك.

ما يجب أن تعرفه حول إرشادات السلامة

يرجى قراءة هذا الدليل بعناية للتأكد من أنك تعرف كيفية تشغيل الميزات والوظائف المتعددة لغسالتك الجديدة بسلامة وفعالية. كما يجب الاحتفاظ به في مكان آمن بالقرب من الجهاز للرجوع إليه في المستقبل. يستخدم هذا الجهاز للغرض المخصص له فقط كما هو مذكور في دليل المالك هذا. لا تغطي التحذيرات والتنبيهات وإرشادات السلامة الهامة التالية كافة الظروف والمواقف المحتملة التعرض لها. لذا يجب التعامل بحذر وانتباه وعناية عند تركيب الغسالة وصيانتها وتشغيلها. نظراً لأن إرشادات التشغيل التالية تنطبق على طرازات متعددة، فإن خصائص الغسالة الخاصة بك قد تختلف قليلاً عن تلك الموصوفة في هذا الدليل. كما أن بعض علامات التحذير المذكورة قد تكون غير قابلة للتطبيق. إذا كانت لديك أي أسئلة أو تساؤلات، اتصل بأقرب مركز خدمة أو اعثر على التعليمات والمعلومات عبر الإنترنت على موقع www.samsung.com.

الرموز والاحتياطات الهامة للسلامة

تشير الرموز والعلامات الموجودة في دليل المستخدم هذا إلى ما يلي:

الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى إصابات خطيرة للأفراد أو الموت و/أو تلف الغسالة.	 تحذير
الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى إصابات للأفراد و/أو تلف الغسالة.	 تنبيه
لتقليل خطر حدوث حريق أو انفجار أو صدمة كهربائية أو إصابة جسدية عند استخدام الغسالة، اتبع احتياطات السلامة الأساسية التالية:	 تنبيه
منوع.	
منوع الفك.	
منوع اللمس.	
اتبع الإرشادات كما هي.	
قم بفصل موصل الطاقة من مقبس الحائط.	
تأكد من توصيل الغسالة بأخذ أرضي لمنع حدوث صدمة كهربائية.	
اتصل بمركز الخدمة للحصول على المساعدة.	
ملاحظة	

تهدف علامات التحذير هذه إلى منع حدوث إصابات لك وللآخرين.

لذا الرجاء اتباعها بعناية.

بعد الاطلاع على هذا الدليل، قم بحفظه في مكان آمن للاستناد إليه كمرجع في المستقبل.

★ اقرأ كافة الإرشادات أولاً قبل استخدام الجهاز.

يوجد احتمال التعرض للمخاطر كما هو الحال مع كافة الأجهزة الكهربائية وأجزائها المتحركة. وتشغيل هذا الجهاز بأمان. يجب عليك التعرف على طريقة تشغيله وتوخي الحذر عند استخدامه.

 تحذير: لتقليل إمكانية نشوب حريق أو صدمة كهربائية أو إصابة للأشخاص أثناء استخدام الغسالة، قم باتباع احتياطات الأمان الأساسية بما في ذلك ما يلي:

لا تدع الأطفال (أو الحيوانات الأليفة) يلعبون فوق الغسالة أو بداخلها. حيث لا يمكن فتح باب الغسالة بسهولة من الداخل، وقد يصاب الأطفال بإصابات بالغة في حالة احتباسهم بداخلها.

لم يتم تصميم هذا الجهاز للاستخدام من قبل أشخاص لديهم مشكلات جسدية وعقلية وحسية (بما فيهم الأطفال) أو نقص في المعرفة أو الخبرة، إلا تحت إشراف أو تعليمات بخصوص استخدامه من قبل الشخص المسؤول عن سلامتهم.

يجب مراقبة الأطفال لضمان عدم عبثهم بالغسالة.

بالنسبة للاستخدام في أوروبا: يمكن استخدام هذا الجهاز بواسطة الأطفال الذين يبلغون من العمر ٨ سنوات أو أكبر وكذلك بواسطة الأشخاص الذين يعانون من قصور جسدي أو حسي أو عقلي أو نقص الخبرة والمعرفة بشرط خضوعهم للإشراف وتوعيتهم بالإرشادات الخاصة باستخدام الجهاز بطريقة آمنة وأن يتفهموا المخاطر الكامنة. يجب منع الأطفال من اللعب بالجهاز. ويجب ألا يقوم الأطفال بعملية التنظيف أو أعمال الصيانة التي يمكن للمستخدم القيام بها بدون إشراف.

في حالة تلف كابل الجهاز (سلك التيار الكهربائي)، يجب تغييره من قبل الشركة المصنعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتفادي التعرض لأي خطر.

يجب وضع الجهاز بالقرب من مأخذ التيار الكهربائي، وصنابير توريد الماء وخراطيم تصريف الماء بحيث يسهل الوصول إليها.

بالنسبة للأجهزة ذات فتحات التهوية في قاعدتها، يتعين عدم إعاقة أو سد هذه الفتحات بالسجادة.

يجب استخدام مجموعات الخراطيم الجديدة ويجب عدم استخدام مجموعة الخراطيم القديمة.

تنبيه: ولتجنب المخاطر الناجمة عن إعادة الضبط غير القصدي للفاصل الحراري، فإنه يتعين عدم تزويد الجهاز خلال جهاز تبديل خارجي مثل المؤقت أو الاتصال بدائرة يجري تشغيلها وإيقاف تشغيلها بشكل منتظم بواسطة خاصية ما.

معلومات السلامة

علامات التحذير الخطيرة الخاصة بالتركيب



- يجب أن يتم تركيب هذا الجهاز بواسطة فني مؤهل أو شركة صيانة متخصصة.
- قد ينتج عن الفشل في اتباع هذه التعليمات حدوث صدمة كهربائية أو حريق أو انفجار أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

يجب توخي الحذر عند رفع الجهاز لأن وزنه ثقيل

- قم بتوصيل كابل الطاقة في مقبس التيار الكهربائي المتناوب بقوة ٢٣٠ فولت/ ٦٠ هرتز/ ١٥ أمبير أو أعلى واستخدم المقبس لهذا الجهاز فقط. كما يجب عدم استخدام كبل تمديد.
- قد يؤدي مشاركة مقبس الحائط مع أجهزة أخرى باستخدام سلك طاقة أو مد سلك الطاقة إلى حدوث صدمة كهربائية أو حريق.
- تأكد من أن الجهد الكهربائي للطاقة والتردد والتيار مطابقة للقياسات الخاصة بمواصفات المنتج. يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربائية أو حريق. لذا، تأكد من توصيل سلك الطاقة في مقبس الحائط بإحكام.
- قم بإزالة أي مواد خارجية مثل الأتربة أو الماء من النهايات الطرفية لسلك الطاقة ونقاط الاتصال باستخدام قطعة قماش جافة بشكل منتظم.
- قم بإلغاء توصيل سلك الطاقة وتنظيفه باستخدام قطعة قماش جافة.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربائية أو حريق.
- قم بتوصيل سلك الطاقة في مقبس الحائط في الاتجاه الصحيح بحيث يكون اتجاه السلك نحو الأرضية.
- إذا تمت توصيل سلك الطاقة في المقبس في الاتجاه المعاكس، فقد تتلف الأسلاك الكهربائية الموجودة داخل الكبل وقد يؤدي هذا الأمر إلى حدوث صدمة كهربائية أو حريق.
- احتفظ بجميع مواد التغليف بعيداً عن متناول الأطفال. حيث إن مواد التغليف قد تمثل خطورة على الأطفال.
- قد يؤدي وضع الطفل لكيس فوق رأسه إلى إصابته بالاختناق.
- في حالة تلف الجهاز أو سلك الطاقة أو موصل الطاقة، اتصل بأقرب مركز صيانة إليك.



- يجب تثبيت هذا الجهاز على الأرض بشكل سليم.
- لا تقم بتثبيت الجهاز على الأرض بجانب أنبوب غاز أو أنبوب ماء بلاستيكي أو خط تليفون.
- قد ينتج عن هذا الأمر حدوث صدمة كهربائية أو حريق أو انفجار أو مشاكل تتعلق بالمنتج
- يجب عدم توصيل كبل الطاقة في مقبس لم يتم تأريضه بشكل صحيح وتأكد من أن ذلك يتم وفقاً للمواصفات المحلية والقومية.



- يجب عدم تركيب هذا الجهاز بالقرب من سخان أو مواد قابلة للاشتعال.
- يجب عدم تركيب هذا الجهاز في بيئة رطبة أو موقع به زيت أو أتربة أو في مكان يتعرض لضوء الشمس المباشر والماء (قطرات المطر).
- يجب عدم تركيب هذا الجهاز في موقع تكون درجة حرارته منخفضة
- قد يؤدي الجليد إلى انفجار الأنابيب
- يجب عدم تركيب هذا الجهاز في موقع يكون به تسرب للغاز.
- قد ينتج عن هذا الأمر حدوث صدمة كهربائية أو حريق.
- لا تستخدم محول كهربائي.
- قد ينتج عن هذا الأمر حدوث صدمة كهربائية أو حريق.
- لا تستخدم سلك طاقة تالف أو كبل طاقة تالف أو مقبس حائط غير محكم.
- قد ينتج عن هذا الأمر حدوث صدمة كهربائية أو حريق.
- يجب عدم جذب سلك الطاقة أو ثنيه بقوة.
- يجب عدم لف سلك الطاقة أو طيه.
- يجب عدم تعليق سلك الطاقة فوق كائن معدني أو وضع كائن ثقيل فوق سلك الطاقة أو إدراج كائنات بين سلك الطاقة أو دفع سلك الطاقة في المساحة الموجودة خلف الجهاز.
- قد ينتج عن هذا الأمر حدوث صدمة كهربائية أو حريق.
- يجب عدم جذب سلك الطاقة، أثناء عدم توصيل موصل الطاقة.

- قم بفصل موصل الطاقة عن طريق الإمساك بالموصل.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.
- لا تضع سلك الطاقة والأنابيب في مكان قد يعرضك للسقوط فوقها.

علامات التنبيه الخاصة بالتركيب



- ★ يجب وضع هذا الجهاز بطريقة يمكن من خلالها الوصول إلى موصل الطاقة.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق نتيجة لتسريب الكهرباء.
- يجب تركيب جهازك على أرضية مستوية وصلبة لتحمل وزن الجهاز.
- قد ينتج عن الفشل في اتباع هذه التعليمات وجود اهتزازات أو حركات أو ضوضاء أو مشاكل غير طبيعية تتعلق بالمنتج.

علامات التحذير الخاصة بالاستخدام



- ★ في حالة تعرض الجهاز لكمية زائدة من الماء، قم بإيقاف تشغيل المياه وقطع اتصال الكهرباء بشكل فوري واتصل بأقرب مركز صيانة.
- لا تلمس سلك التيار الكهربائي بيدين مبتلئين.
- قد يؤدي عدم الالتزام بذلك إلى الإصابة بصدمة كهربية.
- في حالة إصدار الجهاز لضوضاء غير طبيعية، أو رائحة اشتعال أو دخان، قم بإلغاء توصيل سلك الطاقة فوراً واتصل بأقرب مركز للصيانة.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.
- في حالة وجود تسريب للغاز (مثل غاز البروبان أو LP وما إلى ذلك)، يجب تهوية المكان فوراً بدون لمس سلك الطاقة. لا تقم بلمس الجهاز أو سلك الطاقة.
- لا تستخدم مروحة تهوية.
- قد ينتج عن الشرارة حدوث صدمة كهربية أو حريق.
- لا تدع الأطفال يلعبون فوق الغسالة أو بداخلها. كذلك، يجب إزالة حامل باب الغسالة عند التخلص من الجهاز.
- في حالة الانحشار داخل الغسالة، قد يتعرض الطفل للاحتجاز والاختناق حتى الموت.
- تأكد من إزالة الغلاف (الإسفنج، الفوم) المرفق بأسفل الغسالة قبل الاستخدام.

معلومات السلامة

❑ يجب عدم غسل العناصر العالق بها الجاز أو الكيروسين أو البنزين أو تدر الطلاء أو الكحول أو أي مواد أخرى قابلة للاشتعال أو الانفجار.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق أو انفجار.

يجب عدم فتح باب الغسالة بالقوة أثناء التشغيل (الغسل/التجفيف/التنشيف عند درجة حرارة عالية).

- قد ينتج عن اندفاع الماء خارج الغسالة حدوث الإصابة بالحروق أو التسبب في أن تصبح الأرض منزلقة.

قد ينتج عن هذا الأمر إصابات شخصية.

- قد يؤدي فتح الباب بالقوة إلى تلف المنتج أو الإصابة.

يجب عدم وضع يديك تحت الغسالة.

- قد ينتج عن هذا الأمر إصابات شخصية.

لا تلمس سلك التيار الكهربائي بيدين مبتلتي.

- قد ينتج عن هذا الأمر وجود صدمة كهربية.

يجب عدم إيقاف تشغيل الجهاز عن طريق قطع اتصال سلك الطاقة أثناء تشغيل الجهاز.

- قد يؤدي توصيل سلك الطاقة مرة أخرى بالمقبس إلى حدوث شرارة ينتج عنها صدمة كهربية أو حريق.

يجب عدم السماح للأطفال أو الأفراد غير المؤهلين باستخدام هذه الغسالة بدون إشراف. يجب عدم السماح للأطفال بالتسلق فوق الغسالة.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حروق أو إصابة.

لا تضع يديك أو أي كائن معدني أسفل الغسالة أثناء تشغيلها.

- قد ينتج عن هذا الأمر إصابات شخصية.

يجب عدم فصل الجهاز عن طريق جذب سلك الطاقة. يجب إمساك سلك الطاقة بإحكام وسحبه بشكل مستقيم من المنفذ إلى الخارج.

- قد يؤدي تلف السلك إلى حدوث ماس كهربائي أو حريق و/أو صدمة كهربية.

❑ لا تحاول إصلاح الجهاز أو فكّه أو تعديله بنفسك.

- يجب عدم استخدام أي منصهر (مثل النحاس أو سلك معدني وما إلى ذلك) خلاف المنصهر القياسي.

- في حالة وجود حاجة لإصلاح الجهاز أو إعادة تركيبه، اتصل بأقرب مركز صيانة إليك.

- قد ينتج عن الفشل في اتباع هذه التعليمات وجود صدمة كهربائية أو حريق أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

❑ في حال دخول أي أشياء غريبة كالماء إلى الجهاز، فقم بنزع قابس الطاقة والاتصال بأقرب مركز خدمة لديك.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

عندما يصبح خرطوم إمداد الماء غير مثبت بإحكام في الصنبور ويغمر الجهاز بالماء، فقم بنزع قابس الطاقة.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

قم بنزع قابس الطاقة في حال عدم استخدام الجهاز لفترات زمنية طويلة أو أثناء الرعد/العاصفة البرقية.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.



علامات التنبيه الخاصة بالاستخدام



- عندما يعلق بالغسالة مادة غريبة مثل المنظفات أو الأتربة أو مخلفات الطعام وما إلى ذلك، قم بإلغاء توصيل سلك الطاقة وتنظيف الغسالة باستخدام قطعة قماش مبللة وناعمة.
- يؤدي الفشل في الالتزام بهذا الأمر إلى وجود تغيير في الألوان أو التشويه أو التلف أو الصدأ.
 - قد ينكسر الزجاج الأمامي نتيجة حدوث اصطدام قوي. يجب الحرص عند استخدام الغسالة.
 - عندما ينكسر الزجاج قد تحدث إصابة.
 - عند حدوث فشل في توريد الماء أو عند إعادة توصيل خرطوم توريد الماء، يجب فتح الصنبور ببطء.
 - يجب فتح الصنبور ببطء في حالة عدم الاستخدام لفترة طويلة.
 - قد يؤدي وجود ضغط الهواء في خرطوم توريد الماء أو أنبوب الماء إلى تلف جزء من الغسالة أو وجود تسريب للماء.
 - في حالة حدوث خطأ يتعلق بالتصريف أثناء التشغيل، تحقق من وجود مشكلة تتعلق بالتصريف.
 - في حالة استخدام الغسالة أثناء وجود تسريب للماء بها نتيجة لوجود مشكلة تتعلق بالتصريف، قد يؤدي ذلك إلى وجود صدمة كهربية أو حريق نتيجة للتسريب الكهربائي.
 - يجب إدخال غسيل في الغسالة بالكامل بحيث لا يتم تعلق الغسيل بالباب.
 - في حالة تعلق الغسيل بالباب، قد يؤدي ذلك إلى تلف الغسيل أو الغسالة، كما قد ينتج عنه حدوث تسريب للماء.
 - تأكد من إيقاف تشغيل الصنبور في حالة عدم استخدام الغسالة.
 - تأكد من إحكام مسمار توصيل خرطوم توريد الماء.
 - يؤدي الفشل في الالتزام بهذا الأمر إلى تلف الجهاز أو الإصابة.
 - تحقق من عدم تعليق أي مواد غريبة (مخلفات، خيوط وما إلى ذلك) باللاصق المطاطي.
 - قد يحدث تسريب للماء إذا لم يتم إغلاق الباب بالكامل.
 - يجب فتح الصنبور والتحقق من إحكام موصل خرطوم الماء وعدم وجود تسريب للماء قبل استخدام المنتج.
 - في حالة عدم إحكام المسامير أو موصل خرطوم توريد الماء، قد يحدث تسريب للماء.
 - المنتج الذي قمت بشرائه مصمم للاستخدام المنزلي فقط.
 - يعد استعمال المنتج لأغراض تجارية بمثابة إساءة استعمال للمنتج.
 - في هذه الحالة، لن يتم شمول المنتج بواسطة الضمان القياس الوارد من قبل سامسونج ولن تتحمل شركة سامسونج أي مسؤولية حيال الأعطال أو الأضرار الناجمة عن مثل سوء الاستعمال هذا.

معلومات السلامة

⊠ يجب عدم الوقوف فوق الجهاز أو وضع أشياء فوقه (مثل الغسيل أو الشمعدان المشتعل أو السجائر المشتعلة أو الأطباق أو المواد الكيميائية أو الكائنات المعدنية وما إلى ذلك).

- قد ينتج عن هذا الأمر حدوث صدمة كهربائية أو حريق أو مشاكل تتعلق بالمنتج أو الإصابة.

يجب عدم رش مواد متطايرة مثل المبيدات الحشرية فوق سطح الجهاز.

- فبالإضافة إلى أن هذا الأمر يضر بالإنسان، فقد ينتج عنه أيضًا وجود صدمة كهربائية أو حريق أو مشاكل تتعلق بالمنتج.

لا تضع كائنًا ينتج عنه وجود مجال كهرومغناطيسي بالقرب من الغسالة.

- قد ينتج عن هذا الأمر إصابات شخصية نتيجة وجود خطأ يتعلق بالتشغيل.

يجب عدم لمس الماء حيث إن الماء الذي يتم تصريفه أثناء الغسل في درجات حرارة عالية أو أثناء دورة التنشيف يكون ساخنًا.

- قد ينتج عن هذا الأمر وجود حروق أو إصابات شخصية.

يجب عدم غسل المقاعد أو السجاد أو القماش (*) المضاد للماء أو تنشيفها أو جفيفها ما لم يكن جهازك يتضمن برنامجًا خاصًا لغسل هذه العناصر.

- يجب عدم غسل السجاد السميكة أو الصلب حتى في حالة وجود علامة الغسالة على علامة العناية.

- قد يؤدي هذا الأمر إلى وجود إصابة أو تلف الغسالة أو الحوائط أو الأرضية أو الملابس نتيجة للاهتزازات غير الطبيعية.

* المفروشات الصوفية أو أغشية الأمطار أو سترات الصيد أو بنطال التزلج أو حقائب النوم أو الحفاضات وأغطية الدراجات والدراجات البخارية والسيارات وما إلى ذلك.

يجب عدم تشغيل الغسالة في حالة عدم وجود درج المسحوق.

- قد ينتج عن هذا الأمر وجود صدمة كهربائية أو إصابة نتيجة لتسريب الماء.

يجب عدم لمس الحوض من الداخل أثناء عملية التنشيف أو بعدها مباشرة حيث إنه يكون ساخنًا.

- قد ينتج عن هذا الأمر الإصابة بالحروق.

يجب عدم وضع يدك في درج المسحوق بعد فتحه.

- قد ينتج عن هذا إصابات شخصية حيث يمكن إصابة يدك بواسطة جهاز إدخال المسحوق. تجنب وضع أي أشياء (مثل الأحذية وبقايا الطعام والحيوانات) غير الملابس بداخل الغسالة.

- قد يؤدي هذا الأمر إلى تلف الغسالة أو الإصابة والموت في حالة وجود حيوانات أليفة نتيجة للاهتزازات غير الطبيعية.

يجب عدم الضغط على الأزرار باستخدام كائنات حادة مثل المسامير أو السكاكين أو الأظافر وما إلى ذلك.

- قد ينتج عن هذا الأمر حدوث صدمة كهربائية أو إصابة.

يُحظر غسل الملابس التي تحتوي على زيوت أو كرمات أو مستحضرات، والتي تكون في الغالب موجودة في المستحضرات الجلدية أو عيادات التدليك.

- قد ينتج عن هذا الأمر تشوه الحاجز المطاطي وتسريب الماء.

يجب عدم ترك أي كائنات معدنية مثل الدبابيس أو بنس الشعر أو مواد التبييض في الحوض لفترات طويلة من الوقت.

- قد يؤدي هذا الأمر إلى صدأ الحوض.

- وفي حالة ظهور الصدأ على سطح الأنبوب، يُفضل تنظيف سطح الأنبوب باستخدام سائل تنظيف (عادي) وإسفنجة في تنظيفه. يجب عدم استخدام فرشاة معدنية نهائياً.

يجب عدم استخدام سائل التنظيف بشكل مباشر. كما يجب عدم غسل الغسيل أو شطفه أو تنشيفه إذا كان يتضمن مسحوق للتنظيف الجاف.

- قد يؤدي هذا الأمر إلى وجود اشتعال فوري نتيجة للحرارة الناتجة عن تأكسد الزيت.

يجب عدم استخدام الماء القادم من أجهزة تبريد/تسخين الماء.

- قد ينتج عن هذا الأمر حدوث مشاكل في الغسالة.

- يجب عدم استخدام صابون غسل اليدين الطبيعي مع الغسالة.
- ففي حالة التراكم والتصلب داخل الغسالة، قد حدث مشاكل تتعلق بالمنتج مثل تغيير اللون أو الصدأ أو وجود رائحة سيئة.
- يجب عدم غسل أنواع من الغسيل من المفروشات في شبكة الغسيل.
- يجب وضع الجوارب والصدرية في شبكة الغسيل وغسلها مع غسيل آخر.
- يؤدي الفشل في الالتزام بهذا الأمر إلى وجود إصابة نتيجة للاهتزازات غير الطبيعية.
- لا تستخدم مسحوق غسيل صلب.
- فقد يحدث تسريب للماء في حالة تراكمه داخل الغسالة.
- بالنسبة للغسالات التي تحتوي على فتحات تهوية بقاعدتها، يجب تجنب سد السجاد أو أية عوائق أخرى لهذه الفتحات.
- تأكد من تفريغ جيوب الملابس التي سيتم غسلها.
- قد تتسبب الأشياء الصلبة والحادة مثل العملات المعدنية أو الدبابيس أو المسامير أو البراغي أو الأحجار في إحداث أضرار بالغة بالجهاز.
- يجب عدم غسل الملابس المزودة بإبريمات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.

علامات التحذير الخطيرة الخاصة بالتنظيف



- يجب عدم تنظيف الجهاز عن طريق رش الماء فوق الجهاز مباشرةً.
- لا تقم باستخدام منظف يحتوي على حمض قوي.
- يجب عدم استخدام البنزين أو التمر أو الكحول لتنظيف الجهاز.
- قد ينتج عن هذا الأمر وجود تغيير في اللون أو تشويه أو صدمة كهربية أو حريق.
- قم بفصل قابس الجهاز من مقبس الحائط قبل تنظيفه أو صيانته.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.



المحتويات



إعداد الغسالة	١٣
فحص الأجزاء	١٣
استيفاء متطلبات التركيب	١٤
مصدر الطاقة الكهربائية والتوصيل الأرضي	١٤
توريد الماء	١٤
التصريف	١٥
سطح الأرضية	١٥
درجة الحرارة المحيطة	١٥
تركيب القنطرة أو الخزانة	١٥
تركيب الغسالة	١٥
غسل الملابس	٢١
الغسل للمرة الأولى	٢١
إرشادات أساسية	٢١
استخدام لوحة التحكم	٢٢
التأمين ضد عبث الأطفال	٢٥
إيقاف تشغيل الصوت	٢٥
تأجيل التشغيل	٢٥
My Cycle (الدورة المفضلة)	٢٦
Eco Bubble (غسيل الفقاعات)	٢٧
غسل الملابس باستخدام قرص خديد الدورة	٢٨
غسل الملابس يدوياً	٢٩
معلومات حول مسحوق الغسيل والمواد الإضافية	٣٠
ما هو مسحوق الغسيل الذي يمكنك استخدامه	٣٠
درج مسحوق الغسيل	٣١
المنظف السائل (متوفر بطرازات محددة)	٣١
تنظيف الغسالة وصيانتها	٣٢
ECO DRUM CLEAN (تنظيف الحوض)	٣٢
تصريف الماء من الغسالة عند الطوارئ	٣٣
تنظيف درج مسحوق الغسيل والجزء الداخلي منه	٣٤
تنظيف مصفاة الخلفات	٣٥
تنظيف الأسطح الخارجية	٣٥
تنظيف المصفاة الشبكية المتصلة بخرطوم الماء	٣٦
إصلاح جهاز غسالة متجمد	٣٦
تخزين الغسالة	٣٦
استكشاف المشاكل وإصلاحها ورموز المعلومات	٣٧
تحقق مما يلي إذا كانت الغسالة...	٣٧
رموز المعلومات	٣٨
جدول الدورات	٣٩
جدول العناية بالأقمشة	٤٠
حمية البيئة	٤٠
بيان التوافق	٤٠
المواصفات	٤١

إعداد الغسالة

تأكد من إتباع القوائم بالتركيب لهذه الإرشادات بدقة حتى تعمل الغسالة الجديدة بشكل صحيح ولتجنب حدوث إصابات عند القيام بالغسل.

فحص الأجزاء

أخرج الغسالة بحرص من الصندوق وتأكد من وجود كافة الأجزاء الموضحة أدناه. في حالة تلف الغسالة أثناء عملية الشحن، أو عدم استلامك لكافة الأجزاء، قم بالاتصال بخدمة عملاء Samsung أو الموزع المعتمد لدى Samsung.

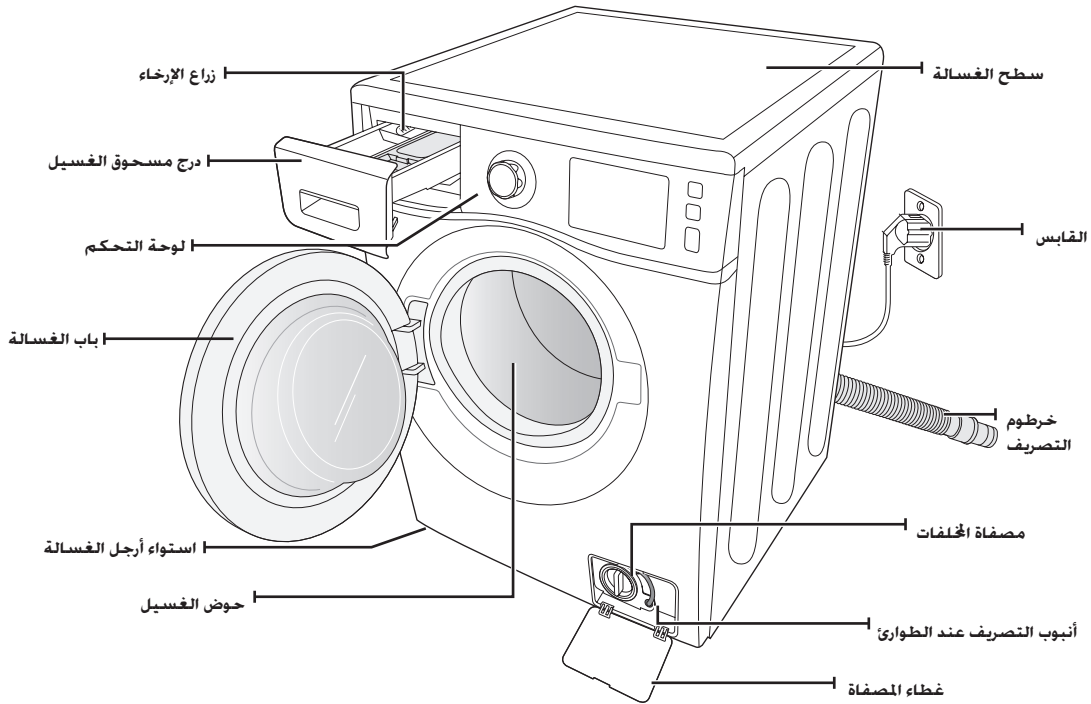

درج المنظف
السائل (طرازات
محددة)

مثبت الغطاء

حامل الخرطوم

ساخن (طرازات محددة)

خرطوم توريد الماء

بارد

أغطية
مفاتيح
المسامير

مفاتيح
الربط

* أغطية مفاتيح المسامير: يعتمد عدد أغطية فتحات المسامير على الطراز (من ٣ إلى ٥ أغطية).



إعداد الغسالة

استيفاء متطلبات التركيب

مصدر الطاقة الكهربائية والتوصيل الأرضي

لتقليل خطر حدوث حريق أو صدمة كهربائية أو إصابة جسدية، يجب أن تتم عملية توصيل الأسلاك والتوصيل الأرضي وفقاً لأحدث نسخة من اللائحة القومية أو الوطنية للكهرباء ANSI/FNPA، رقم ٧٠ والقوانين والضوابط المحلية. تقع على عاتق المالك مسؤولية توفير المتطلبات الكهربائية الكافية لهذا الجهاز.



منوع استخدام كبلات إضافية.
استخدم سلك التيار الكهربائي المرفق مع الغسالة فقط.

عند الإعداد لعملية التركيب، تأكد أن سلك التيار الكهربائي يوفر:

- قاطع دائرة كهربائية أو منصهر بقوة ٢٣٠ فولت تيار متردد / ٦٠ هرتز
- دائرة كهربائية فرعية لتشغيل الغسالة فقط

يجب توصيل الغسالة بأخذ أرضي بشكل صحيح. وفي حالة حدوث خلل أو تعطل في الأداء، يعمل التوصيل الأرضي على تقليل خطورة التعرض لصدمة كهربائية وذلك بتوفير مسار أقل مقاومة للتيار الكهربائي.

يتم تزويد الغسالة بسلك تيار كهربائي به ثلاثة قوابس شوكية أرضية لاستخدامها بشكل صحيح في المقبس الأرضي المركب بشكل صحيح.



لا تقم بتوصيل السلك الأرضي بخطوط مواسير السباكة البلاستيكية، أو خطوط الغاز، أو مواسير الماء الساخن.

فقد يؤدي التوصيل غير الصحيح للموصل الأرضي الخاص بالغسالة إلى حدوث صدمة كهربائية.

استشر فني كهربائي مؤهل أو فني صيانة إذا لم تكن متأكدًا من صحة التوصيل الأرضي للغسالة. يحظر استخدام قابس آخر غير المرفق مع الغسالة. وفي حالة عدم ملائمة مع مأخذ التيار، استعن بفني كهربائي مؤهل لتركيب مأخذ مناسب.

توريد الماء

يتم ملء الغسالة بشكل سليم عندما يكون ضغط الماء ٥٠ ~ ٨٠ كيلوباسكال. قد يتسبب ضغط الماء الأقل من ٥٠ كيلوباسكال في تلف صمام الماء مما يؤدي إلى عدم السماح بإغلاقه كليةً. أو قد تستغرق الغسالة وقتًا أطول مما تسمح به عناصر التحكم للملئها. ما ينتج عنه إيقاف تشغيل الغسالة، (تم تضمين نظام خديد وقت ملء الغسالة في عناصر التحكم والذي تم تصميمه للحد من عمليات تدفق/ فيضان الماء في حالة ارتخاء الخرطوم الداخلي).

يجب أن تكون صنابير الماء على بُعد ١٢٠ سم من الجانب الخلفي للغسالة لتسهيل وصول خرطوم صنابير الماء المرفقة إلى الغسالة.



تقوم معظم متاجر توريد المواسير ببيع خرطوم صنابير الماء بمختلف أطوالها التي تصل إلى ١٠ أقدام (٣٠٥ سم).

يمكنك تقليل مخاطر تسرب الماء أو تلوئه عن طريق:

- تبسير وصول الخرطوم إلى صنابير الماء.
- إغلاق الصنابير في حالة عدم تشغيل الغسالة.
- قم بفحص دوري للتأكد من أن مثبتات الخرطوم تسرب الماء.



قم بفحص كافة التوصيلات الموجودة في صمام وصنابير الماء للتحقق مما إذا كانت هناك أي تسريبات قبل استخدام الغسالة للمرة الأولى.

التصريف

توصي Samsung باستخدام ماسورة رأسية يصل ارتفاعها إلى ٦٥ سم. يجب توجيه خرطوم التصريف باستخدام مشبك خرطوم التصريف إلى اتجاه الماسورة الرأسية. يجب أن تكون الماسورة الرأسية كبيرة بدرجة كافية لإدخال القطر الخارجي لخرطوم التصريف. يقوم المصنع بإرفاق خرطوم التصريف.

سطح الأرضية

يجب تثبيت الغسالة على سطح ثابت وصلب للحصول على أفضل أداء. قد تحتاج الأسطح الخشبية إلى تقويتها لتقليل الاهتزاز و/أو الأحمال غير المتزنة. يكون السجاد وأسطح البلاط الناعمة بمثابة عوامل مساهمة في عمليات الاهتزاز واحتمالية حرك الغسالة بشكل طفيف أثناء دورة التنشيف.

لا تقم بتركيب الغسالة على أرضية أو بنية ضعيفة.

درجة الحرارة المحيطة

لا تقم بتركيب الغسالة في مناطق قد يتجمد فيها الماء، حيث أن الغسالة تحتفظ دوماً ببعض الماء في صمام الماء والمضخة وأجزاء من الخرطوم. يمكن أن يتسبب الماء المتجمد الموجود في المواسير في إلحاق ضرر بالأحزمة والمضخة والمكونات الأخرى.

تركيب القنطرة أو الخزانة

لتشغيل الغسالة بشكل آمن وسليم، يجب توفير الحد الأدنى من المساحات بالنسبة إلى ما يلي:

الجوانب - ٢٥ ملليمتر	الجانب الخلفي - ٥٠ ملليمتر
الجزء العلوي - ٢٥ ملليمتر	الواجهة - ٤٦٥ ملليمتر

في حالة تركيب الغسالة والجفف معاً، يجب أن يكون الجانب العلوي للقنطرة أو الخزانة فتحة هواء خالية قدرها ٤٦٥ ملليمتر على الأقل. لا تتطلب الغسالة وحدها فتحة هواء بعينها.

تركيب الغسالة

الخطوة رقم ١

اختيار مكان الغسالة

قبل تركيب الغسالة، تأكد من توفر ما يلي في المكان الذي قمت باختياره:

- سطح صلب ومستوي دون وجود سجاد أو بلاط قد يعوق عملية التهوية
- مكان بعيد عن أشعة الشمس المباشرة
- تتوفر به تهوية كافية
- لن يصل إلى مرحلة التجمد (أقل من ٠ درجة مئوية)
- يكون بعيداً عن مصادر الحرارة مثل البترول أو الغاز
- تتوفر به مساحة كافية حتى لا يتم وضع الغسالة على سلك الطاقة


إعداد الغسالة

الخطوة رقم ٢


إزالة مسامير الشحن

قبل تركيب جهاز الغسالة، يجب إزالة مسامير الشحن الخمسة من اللوحة الخلفية للجهاز.


١. قم بفك جميع المسامير بواسطة مفتاح الربط المرفق مع الجهاز.

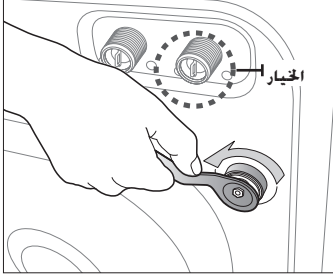

٢. امسك الصواميل بواسطة مفتاح الربط واسحبها من خلال الجزء العريض للفتحة. كرر ذلك لإزالة كل مسمار.

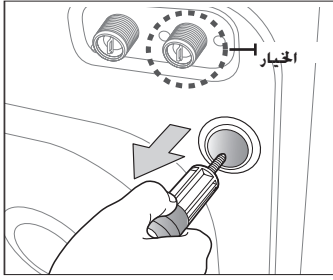

٣. قم بتغطية جميع الفتحات باستخدام الأغشية البلاستيكية المرفقة مع الجهاز.

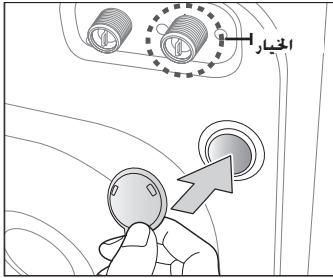


٤. قم بحفظ صواميل الشحن في مكان بعيد آمن حيث قد تحتاج إلى نقل الغسالة إلى مكان آخر في المستقبل.

قد تشكل مواد التعبئة خطورة على الأطفال: احتفظ بكافة مواد التعبئة (الأكياس البلاستيكية والمواد المصنوعة من مادة البوليستيرين، الخ.) بعيداً عن متناول الأطفال.



تحذير

قم بإدخال مثبت الغطاء، (أحد الملحقات الموجودة داخل عبوة الفينيل)، في الفتحة التي قممت بإخراج سلك الكهرباء منها بالجانب الخلفي للمنتج.

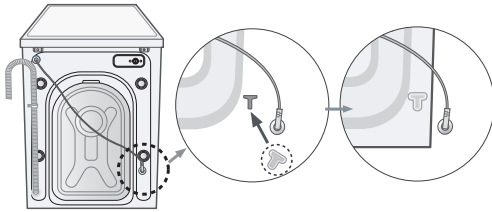

الخطوة رقم ٣


ضبط استواء أرجل الغسالة

عند تركيب الغسالة، تأكد من توصيل سلك الطاقة وخرطوم توريد الماء وخرطوم التصريف بسهولة.




١. ضع الغسالة في المكان المحدد.

٢. اجعل الغسالة مستوية عن طريق لف الأقدام المساوية إلى الداخل والخارج يدويًا كما هو مطلوب.

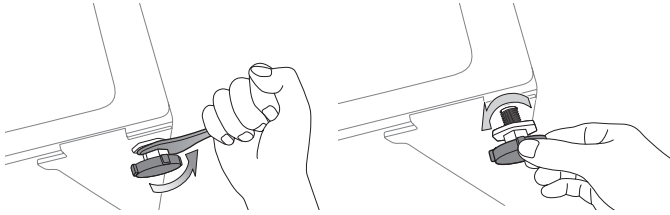

٣. عند استواء الغسالة، أحكم ربط الصواميل باستخدام مفتاح الربط المرفق مع الغسالة.

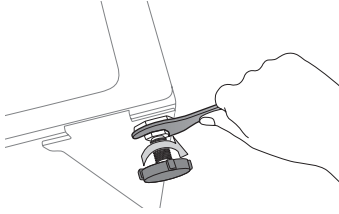

الخطوة رقم ٤


توصيل الماء والخرطوم

توصيل خرطوم توريد الماء

١. استخدم مثبت الذراع الذي على شكل حرف L الخاص بخرطوم توريد الماء البارد ووصله إلى مدخل توريد الماء البارد الموجود في الجانب الخلفي من الغسالة. وأحكم ربطه يدويًا.

يجب توصيل أحد طرفي خرطوم توريد الماء بالغسالة وتوصيل الطرف الآخر للخرطوم بصنبور الماء. لا تجذب خرطوم توريد الماء. إذا كان الخرطوم قصيرًا للغاية، استبدله بخرطوم أطول يتحمل الضغط العالي.

٢. صل الطرف الآخر لخرطوم توريد الماء البارد بصنبور الماء البارد وأحكم تثبيته يدويًا. يمكنك، إذا لزم الأمر، إعادة توصيل خرطوم الماء بالغسالة من خلال إرخاء مثبت الخرطوم ولفه وإعادة ربطه بإحكام.

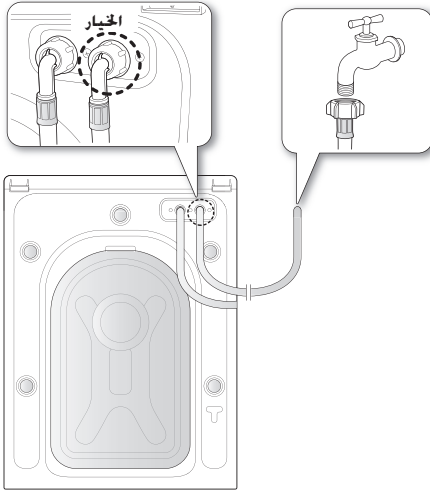


بالنسبة للطرازات المحددة المزودة بمدخل إضافي لتوريد الماء الساخن:

١. استخدم مثبت الذراع الذي على شكل L الأحمر الخاص بخرطوم توريد الماء الساخن ووصله إلى مدخل توريد الماء الساخن الموجود في الجانب الخلفي من الغسالة. وأحكم ربطه يدويًا.
٢. صل الطرف الآخر لخرطوم توريد الماء الساخن بصنبور الماء الساخن وأحكم تثبيته يدويًا.
٣. استخدم قطعة على شكل Y إذا أردت استخدام الماء البارد فقط.


إعداد الغسالة

توصيل خرطوم توريد الماء (طرازات معينة)

١. قم بإزالة المحول من خرطوم تزويد الماء.

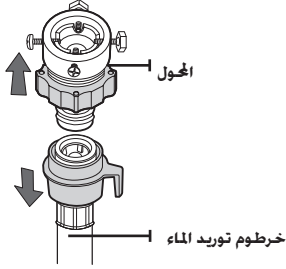


٢. أولاً، باستخدام مفك براغي من نوع "٥"، قم بخلخلة المسامير الأربعة الموجودة بالمحول. ثم أخرج المحول واجعل الجزء (٢) باتجاه السهم حتى تتواجد مسافة مقدارها ٥ سم بينهما.

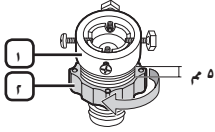


٣. قم بتوصيل المحول بصنبور الماء عن طريق ربط المسامير بإحكام مع ترك المحول يتدلى إلى أسفل.

اجعل الجزء (٢) باتجاه السهم ووصل (١) و (٢).

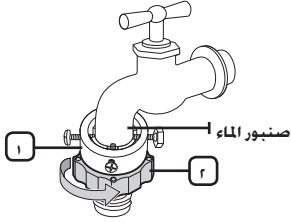



٤. صل خرطوم تزويد الماء بالمحول. عند إرخاء الجزء (٣)، يتصل الخرطوم بالمحول تلقائياً محدثاً صوت "نقرة".

بعد توصيل خرطوم توريد الماء بالمحول، تأكد من توصيله بشكل صحيح عن طريق سحب خرطوم توريد الماء لأسفل.

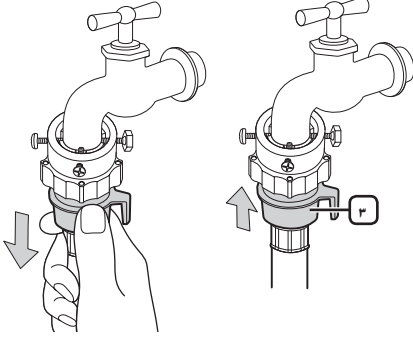


٥. قم بتوصيل الطرف الآخر من خرطوم توريد الماء بصمام دخول الماء الموجود بالجانب الخلفي من الغسالة. لف خرطوم توريد الماء في اتجاه عقارب الساعة.

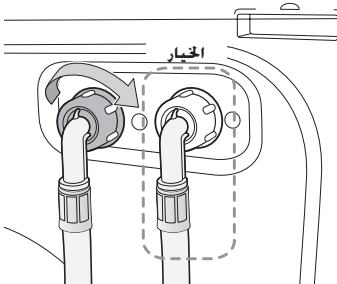

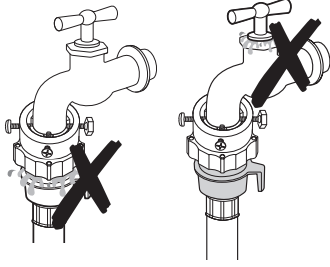

٦. قم بتشغيل مصدر توريد الماء وتأكد من عدم وجود تسريبات من صمام الماء أو الصنبور أو المحول. قم بتكرار الخطوات السابقة. في حالة تسريب الماء. لا تستخدم الغسالة في حالة تسريب الماء. فقد يتسبب ذلك في حدوث صعقة كهربائية أو إصابة جسدية. 

- إذا كان صنبور الماء من نوع قلاووظ، قم بتوصيل خرطوم توريد الماء بالصنبور كما هو مبين.

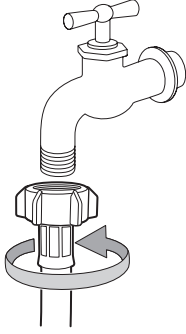


- استخدم صنبور من النوع العادي لتوريد الماء. إذا كان الصنبور مربعاً أو كبيراً جداً، أزل الحلقة الفاصلة قبل إدخال الصنبور في المحول. 

توصيل خرطوم المياه (طرازات محددة)

تم تصميم خرطوم المياه لمنع تسرب المياه تماماً. ويتم توصيله بخرطوم توريد المياه وسيعمل على إيقاف تدفق المياه تلقائياً في حالة تلف الخرطوم. كما يتم عرض مؤشر خذير.

- صل خرطوم تزويد الماء بصنبور الماء كما هو موضح.

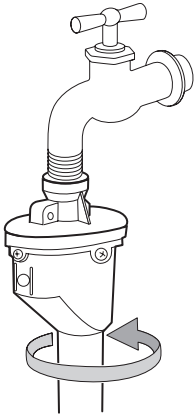


إعداد الغسالة

توصيل خرطوم التصريف

يمكنك وضع نهاية خرطوم التصريف بثلاث طرق:


١. فوق حافة حوض الغسيل: يجب وضع خرطوم التصريف على ارتفاع يتراوح بين ٦٠ و ٩٠ سم. للإبقاء على انثناء خرطوم التصريف. استخدم ماسك الخرطوم البلاستيكي المرفق. ثبت الماسك على الجدار بواسطة خطاف أو ثبته في الصنبور بواسطة سلك أو حبل لمنع سقوط خرطوم التصريف على الأرض.

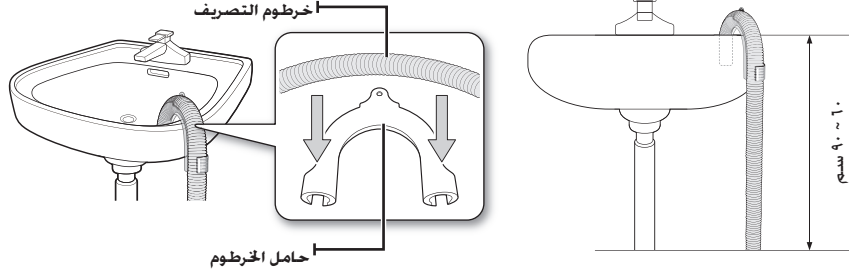

٢. في فرع أنبوب تصريف الحوض: يجب أن يكون فرع أنبوب التصريف فوق سبابة الحوض بحيث يكون طرف الخرطوم على ارتفاع ٦٠ سم على الأقل عن الأرض.
٣. في أنبوب تصريف: توصي Samsung باستخدام أنبوب عمودي على ارتفاع ٦٥ سم؛ على ألا يقل طوله عن ٦٠ سم ولا يزيد عن ٩٠ سم.

يتطلب خرطوم تصريف الماسورة الرأسية؛

- بحد أدنى لقطر الدائرة ٥ سم.
- الحد الأدنى لسعة الجرف ٦٠ متر في الدقيقة.

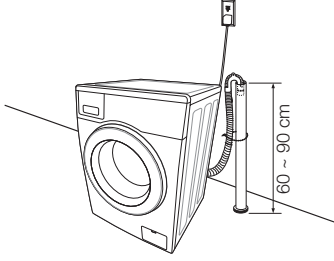

الخطوة رقم ٥

تشغيل الغسالة

قم بتوصيل سلك الطاقة بمقبس حائط معتمد كمخرج تيار كهربائي بقوة من ٢٣٠ فولت تيار متردد / ٦٠ هرتز محمي بمنصهر أو قاطع دائرة. (المزيد من المعلومات حول متطلبات التوصيل الكهربائي والتوصيل الأرضي. راجع صفحة رقم ١٤).


اختبار تشغيل

تأكد من أنك قمت بتركيب الغسالة الخاصة بك بطريقة صحيحة من خلال تشغيل دورة RINSE+SPIN (دوران+شطف) بعد الانتهاء من التركيب.

غسل الملابس

مع الغسالة الجديدة من Samsung، يقوم الجزء الأكثر صلابة بتحديد الكمية التي يجب غسلها أولاً.

الغسل للمرة الأولى

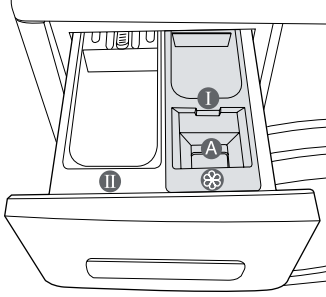

قبل غسل الملابس للمرة الأولى، يجب تشغيل الجهاز دورة كاملة (أي بدون ملابس).

١. اضغط على الزر Power (الطاقة).
 ٢. أضف كمية قليلة من مسحوق الغسيل في الجزء المخصص له ② في درج مسحوق الغسيل.
 ٣. قم بتزويد الغسالة بالماء.
 ٤. اضغط على الزر Start/Pause (بدأ/أيقاف).
- يؤدي ذلك إلى إزالة الماء المتبقي في الغسالة نتيجة التشغيل الاختباري الذي قامت به الشركة المصنعة للجهاز.

- حجيرة ①: مسحوق للغسل الأولي أو النشا.
- حجيرة ②: مسحوق الغسيل لدورة الغسل الرئيسية ومواد تنقية الماء ومواد ما قبل النقع ومادة التبييض ومواد إزالة البقع.
- قم باستخدام درج المنظف السائل لوضع المنظف السائل (راجع الصفحة ٣١ دليل الطراز المائل). لا تقم بإضافة مسحوق التنظيف بداخل درج المنظف السائل.


حجيرة ③: المواد الإضافية، مثل مكون أو منعقم الأقمشة (لا تتجاوز الحافة السفلية (الحدا الأقصى) لـ "A")

إرشادات أساسية

١. قم بوضع الملابس في الغسالة.
- ⚠ لا تتجاوز الوزن المحدد للغسالة. لتحديد سعة الوزن لنوع الملابس التي ترغب في غسلها، راجع الجدول الموجود في صفحة رقم ٣٠.
- تأكد من أن الملابس غير عالقة بالباب، حيث قد يؤدي ذلك إلى تسرب الماء.
- قد يتبقي مسحوق الغسيل في الجزء المطاطي الأمامي للغسالة بعد دورة الغسيل. قم بإزالة أي مسحوق متبقي. لأن ذلك قد يسبب تسرب الماء.
- لا تقم بغسل العناصر العازلة للماء.
٢. أغلق الباب حتى يثبت.
٣. قم بتشغيل الغسالة.
٤. قم بإضافة المسحوق والمواد الإضافية إلى درج التوزيع.
٥. حدد الدورة والخيارات المناسبة لكمية الملابس التي تم إضافتها.
٦. سيضيء مؤشر الغسيل وسيظهر وقت الدورة المحدد على اللوحة.
١. اضغط على الزر Start/Pause (بدأ/أيقاف).

غسل الملابس

استخدام لوحة التحكم

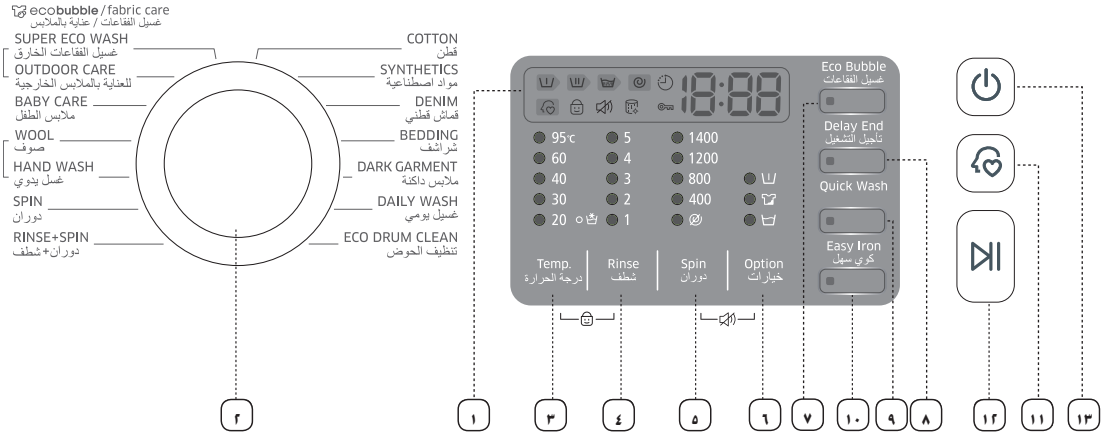

تعرض الوقت المتبقي لدورة الغسيل وكافة المعلومات الخاصة بالدورة ورسائل الخطأ.

لوحة العرض الرسومية الرقمية

اختيار نوع التدوير وسرعة التنشيف للدورة.

لمزيد من المعلومات، راجع "غسل الملابس باستخدام قرص خديد الدورة". (صفحة ٢٨).

COTTON (قطن) - للملابس القطنية خفيفة أو متوسطة الاتساخ وأغطية السرير ومفارش المائدة والملابس الداخلية والمناشف والقمصان، إلخ.

SYNTHETICS (مواد اصطناعية) - لغسل البلوزات والقمصان متوسطة أو خفيفة الاتساخ وغيرها من الملابس المصنوعة من البوليستر (الديولين والتريفيرا) ومادة البوليأمايد (البيرلون والنيلون) أو الأنسجة الصناعية الأخرى.

DENIM (قماش قطني) - يضمن وجود مستوى ماء أعلى في دورة الغسيل الأساسية والشطف الإضافي عدم وجود أي بقايا من مسحوق الغسيل في الملابس.

BEDDING (شرائط) - لغطاء السرير وملءات السرير وأغطية اللحاف، إلخ.

غسل ما يقل عن ٢ كجم ونوع واحد فقط من المفروشات لتحقيق أفضل النتائج.

DARK GARMENT (ملابس داكنة) - تضمن دورات الشطف الإضافية والتنشيف منخفض السرعة غسل ملابس الداكنة المفضلة بلطف وشطفها جيداً.

DAILY WASH (غسيل يومي) - للملابس التي تستخدم يومياً مثل الملابس الداخلية والقمصان والبرنامج القصير لتعيين اختبار.

ECO DRUM CLEAN (تنظيف الحوض) - استخدام ميزة تنظيف الأسطوانة. تعمل هذه الميزة على التخلص من الأوساخ والبكتيريا الموجودة في الأسطوانة. الاستخدام المنتظم (بعد كل ٤٠ عملية غسل) من الأشياء الموصى بها. لا حاجة لإضافة مادة منظفة أو تبييض.

SUPER ECO WASH (غسيل القماصات الخارجة) - تقوم Eco Bubble (غسيل القماصات) ذات درجة الحرارة المنخفضة بضمان تحقيق أفضل نتائج للغسيل بينما تقوم بتوفير الطاقة بشكل فعال.

OUTDOOR CARE (العناية بالملابس الخارجية) - للغسيل الخارجي مثل الملابس التسلق وملابس التزلج والملابس الرياضية. إلى جانب توفر لمسات المعالجة الفعالة للمنسوجات والألياف مثل الألياف اللدنة والقماش القابل للتمدد والألياف الدقيقة.

BABY CARE (ملابس الطفل) - تضمن درجات حرارة الغسل العالية ودورات الشطف الإضافية عدم وجود بقايا لمسحوق الغسيل في الملابس رفيعة السمك.

WOOL (صوف) - تستخدم هذه الدورة لغسل الملابس الصوفية التي يسمح بوضعها في الغسالة فقط. يجب أن تقل الحمولة عن ٢,٠ كجم.

قرص خديد الدورة

غسل الملابس

اضغط على هذا الزر بشكل متكرر للاختيار من بين خيارات خاصية Delay End (تأجيل التشغيل) المتوفرة (من ٣ ساعات إلى ١٩ ساعة بواقع ساعة واحدة). تشير الساعة المعروضة إلى وقت انتهاء دورة الغسيل.	زر تحديد 8 DELAY END (تأجيل التشغيل)
لغسل الملابس خفيفة الاتساخ والغسيل الأقل من ٢ كجم التي تحتاجها بسرعة. يستغرق هذا البرنامج حوالي ١٥ دقيقة كحد أدنى. ولكن قد يختلف من القيم الموضحة حسب ضغط المياه وعسر المياه ودرجة حرارة التزويد بالمياه ودرجة حرارة الغرفة ونوع الغسيل وكميته ودرجة الاتساخ والمسحوق المستخدم للملابس الغير متزنة وحدوث انقطاع التيار الكهربائي والخيارات الإضافية المحددة. • اضغط على هذا الزر بشكل متكرر لاختيار وقت الدورة: ١٥ دقيقة ← ٢٠ دقيقة ← ٣٠ دقيقة ← ٤٠ دقيقة ← ٥٠ دقيقة ← ٦٠ دقيقة ← إيقاف التشغيل يجب أن يكون المنظف سواء كان مسحوقاً أو سائلاً أقل من ٢٠ جراماً (للملابس التي تزن ٢ كجم) أو قد يتبقى المنظف بالملابس.	زر تحديد 9 QUICK WASH (الغسيل السريع)
اضغط على هذا الزر لاختيار الكي السهل. استخدم هذا الخيار لتحضير الملابس المغسولة وبالتالي الكي بسهولة.	زر تحديد 10 EASY IRON (كوي سهل)
اختر الدورة المفضلة لديك بما في ذلك درجة الحرارة والتنشيف ومستوى الاتساخ والخيار. إلخ.	زر تحديد 11 MY CYCLE (الدورة المفضلة)
اضغط لإيقاف الدورة مؤقتاً وإعادة تشغيلها.	زر تحديد 12 START/PAUSE (بدأ/إيقاف)
اضغط على هذا الزر مرة لتشغيل الغسالة. واضغط عليه مرة أخرى لإيقاف تشغيلها. في حالة عدم الضغط على أي من أزرار الغسالة لمدة تزيد عن ١٠ دقائق أثناء تشغيلها. يتم إيقاف تشغيلها تلقائياً.	الزر 13 POWER (الطاقة)


التأمين ضد عبث الأطفال

تمكّنك وظيفة التأمين ضد عبث الأطفال من قفل الأزرار حتى لا يكون هناك إمكانية لتغيير دورة الغسيل التي قمت باختيارها.

التشغيل/عدم التشغيل

إذا كنت ترغب في تشغيل وظيفة Child Lock (التأمين ضد عبث الأطفال)، أو عدم تشغيلها، اضغط على الزرين Temp. (درجة الحرارة) و Rinse (شطف) في وقت واحد لمدة ٣ ثوان. ستضيء علامة "Child Lock (التأمين ضد عبث الأطفال)" عند تشغيل هذه الميزة.

يمكن استخدام زر Power (الطاقة) فقط عند تشغيل وظيفة Child Lock (التأمين ضد عبث الأطفال). يستمر تشغيل وظيفة Child Lock (التأمين ضد عبث الأطفال) حتى بعد تشغيل الغسالة وإيقاف تشغيلها أو بعد فصل توصيل سلك التيار الكهربائي وإعادة توصيله.

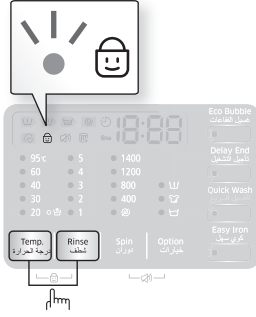


٣ ثوان

إيقاف تشغيل الصوت

يمكن خديد وظيفة Sound Off (إيقاف تشغيل الصوت) مع كافة الدورات. عند خديد هذه الوظيفة، يتم إيقاف تشغيل الصوت لكافة الدورات. حتى في حالة تشغيل الطاقة أو إيقاف تشغيلها بشكل متكرر، لا يتغير الإعداد الذي تم اختياره.

التشغيل/عدم التشغيل

إذا كنت تريد تشغيل وظيفة Sound Off (إيقاف تشغيل الصوت)، اضغط على الزرين Spin (دوران) و Option (خيارات) في وقت واحد لمدة ٣ ثوان. ستضيء علامة "Sound Off (إيقاف تشغيل الصوت)" عند تشغيل هذه الخاصية.

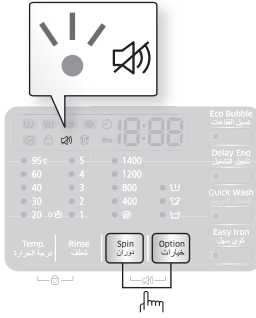

٣ ثوان

تأجيل التشغيل

يمكنك ضبط الغسالة لإنهاء عملية الغسيل تلقائياً في وقت لاحق. قم باختيار تأجيل الوقت من ٣ ساعات حتى ١٩ ساعة (بزيادة ساعة واحدة). تشير الساعة المعروضة إلى الوقت الذي يتم الانتهاء فيه من عملية الغسل.

1. يمكنك ضبط الغسالة تلقائياً أو يدوياً حسب نوع الملابس التي تريد غسلها.
2. اضغط على الزر Delay End (تأجيل التشغيل) بشكل متكرر حتى تصل إلى وقت التأجيل المطلوب.
3. اضغط على الزر Start/Pause (بدأ/إيقاف). سيضيء مؤشر Delay End (تأجيل التشغيل) (⏸️)، وتبدأ الساعة بالعد التنازلي حتى تصل إلى الوقت المحدد.
4. لإلغاء وظيفة Delay End (تأجيل التشغيل)، اضغط على الزر Power (الطاقة) ثم قم بتشغيل الغسالة من جديد.

غسل الملابس

الدورة المفضلة

يتيح لك إمكانية تنشيط الغسل الاعتيادي (درجة الحرارة والتنشيف ومستوى الاتساخ وغيرها) بالضغط على زر مناسب واحد. عند الضغط على الزر **My Cycle (الدورة المفضلة)**، يتم استخدام زر **My Cycle (الدورة المفضلة)** لتحميل خيارات **My Cycle (الدورة المفضلة)** التي تم حفظها واستخدامها. ستشير إضاءة "My Cycle (الدورة المفضلة)" إلى أن الدورة قيد التشغيل. كما ستومض الإضاءة الخاصة بالخيارات والدورة المختارة.

يمكنك تعيين كافة الخيارات كما يلي بالوضع **My Cycle (الدورة المفضلة)**.

١. قم بتنشغيل مصدر توريد الماء.
٢. اضغط على الزر **Power (الطاقة)**.
٣. حدد الدورة باستخدام **Cycle Selector (قرص تحديد الدورة)**.
٤. بعد الانتهاء من تحديد الدورة، قم بتعيين كل خيار تريده.
٥. راجع "جدول الدورة" الموجود بالصفحة ٣٩ للتعرف على إعدادات الخيارات المتوفرة بكل دورة.
٥. ثم يمكنك تخزين الدورة والخيارات المحددة بواسطة الضغط باستمرار على الزر **My Cycle (الدورة المفضلة)** لمدة أكثر من ٣ ثوانٍ بالوضع **My Cycle (الدورة المفضلة)**. يتم عرض الدورة والخيارات التي قمت بتحديدتها في المرة القادمة التي تختار فيها وظيفة **My Cycle (الدورة المفضلة)**.
- يمكنك تغيير إعدادات **My Cycle (الدورة المفضلة)** بواسطة تكرار العملية نفسها المذكورة أعلاه. يتم عرض الإعداد الأخير الذي قمت باستخدامه في المرة القادمة التي تختار فيها وظيفة **My Cycle (الدورة المفضلة)**.
- في حالة الضغط على زر **My Cycle (الدورة المفضلة)** ثم تركه لمدة ٣ ثوانٍ، يتم ظهور الدورة والخيارات السابقة التي تم حفظها. إذا قمت بالضغط مع الاستمرار على **My Cycle (الدورة المفضلة)** لمدة ٣ ثوانٍ أو أكثر، يتم حفظ الدورة والخيارات المعينة حاليًا ويومض مؤشر LED لمدة ٣ ثوانٍ.

Eco Bubble (غسيل الفقاعات)

يسمح نظام Eco Bubble (غسيل الفقاعات) بتوزيع المسحوق بالتساوي ويعمل على تخلله داخل الملابس بشكلٍ أسرع وأعمق. تتوفر وظيفة الفقاعات بكافة الدورات ماعدا دورة ECO DRUM CLEAN (تنظيف الحوض) ومعدل التشغيل المتاح للوظيفة هو كما يلي:

الدورة	وظيفة الفقاعات	إلغاء وظيفة الفقاعات
COTTON (قطن) و SYNTHETICS (مواد اصطناعية) و DENIM (قمماش قطني) و BEDDING (شراشف) و DARK GARMENT (ملابس داكنة) و DAILY WASH (غسيل يومي)	متوفرة	متوفرة
SUPER ECO WASH (غسيل الفقاعات الخارق) و OUTDOOR CARE (للعناية بالملابس الخارجية) و BABY CARE (ملابس الطفل) و WOOL (صوف) و HAND WASH (غسل يدوي)		غير متوفرة
ECO DRUM CLEAN (تنظيف الحوض)	غير متوفرة	-

• قد يتم تطبيق وظيفة فقاعات مختلفة حسب الدورة.

يعتبر خيار Eco Bubble (غسيل الفقاعات) هو الخيار الافتراضي. اضغط عليها مرة واحدة لإلغاء تحديد خيار الفقاعات. ثم اضغط مرة أخرى لتحديد خيار الفقاعات.

١. افتح الباب. ضع الغسيل بداخل حوض الغسل ثم أغلق الباب.

٢. اضغط على الزر Power (الطاقة).

٣. حدد وظيفة.

٤. ضع كمية مناسبة من المسحوق ومنعم الأقمشة بداخل الحجرة المناسبة وفقاً لكمية الملابس ثم قم بإغلاق الدرج.

• أضف كمية مناسبة من المسحوق بداخل حجرة المسحوق (II). ثم أضف منعم الأقمشة بحجرة المنعم (⊗) الموجودة أسفل الخط الرئيسي لمنعم الأقمشة مباشرةً. (الحد أقصى لـ °A°)

• عند تحديد الدورة Prewash (قبل الغسل)، قم بإضافة المسحوق بداخل حجرة الغسل الأولى ① كذلك.

• لاستخدام المنظف السائل، اترك درج المنظف السائل بالقاعدة (راجع قسم "المنظف السائل" بصفحة ٣١).

• لا تقم بإضافة مسحوق التنظيف بداخل درج المنظف السائل.

٥. اضغط على الزر Start/Pause (بدأ/أيقاف).

• اضغط على الزر Start/Pause (بدأ/أيقاف) لبدء عملية الغسل.

• يتم التعرف على كمية الغسيل تلقائياً ويتم غسل الملابس.


• حالما يتم بدء عملية تشغيل الغسالة، لا يمكنك إضافة وظيفة الفقاعات أو تحديدها.

• يتم توليد كمية كافية من الفقاعات بواسطة كمية محددة من المسحوق.

• الرجاء تنظيف مصفاة "الخلفات" باستمرار. يساعد التنظيف المستمر بتوليد فقاعات ذات فاعلية.

• قد يتم امتصاص الفقاعات وتبدو ككمية صغيرة وفقاً للمسحوق والملابس.

• بالرغم من أنه يتم توليد الفقاعات بمجرد بدء عملية الغسيل، فقد تستغرق دقائق عديدة للمستخدمين كي يتم مشاهدتها.

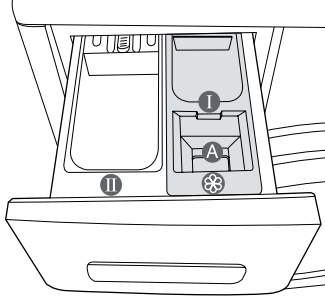

غسل الملابس

غسل الملابس باستخدام قرص تحديد الدورة

تتيح الغسالة الجديدة غسل الملابس بسهولة. باستخدام نظام "التحكم الذكي" الأوتوماتيكي من Samsung. عند اختيار أحد برامج الغسيل، تقوم الغسالة بضبط درجة الحرارة ووقت الغسل وسرعات الغسل المناسبة.

١. افتح صنبور الماء الخاص بالخوض.
 ٢. اضغط على زر Power (الطاقة) الموجود في الغسالة.
 ٣. افتح الباب.
 ٤. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
 ٥. أغلق الباب.
 ٦. أضف مسحوق الغسيل. وإذا لزم الأمر، أضف منعم الأقمشة أو مسحوق الغسل الأولي في الحجيرات المناسبة.
-  تتاح خاصية Pre-wash (قبل الغسل) عند تحديد الدورات: COTTON (قطن) و SYNTHETICS (مواد اصطناعية) و DENIM (قمماش قطني) و BEDDING (بشراشف) و DARK GARMENT (ملابس داكنة) و DAILY WASH (غسيل يومي) و SUPER ECO WASH (غسيل الفقااعات الخارق) و BABY CARE (ملابس الطفل). وبعد الغسل الأولي ضرورياً فقط في حالة الاتساخ الشديد للملابس.
٧. استخدم قرص تحديد الدورة لتحديد الدورة المناسبة وفقاً لنوع المادة: COTTON (قطن) و SYNTHETICS (مواد اصطناعية) و DENIM (قمماش قطني) و BEDDING (بشراشف) و DARK GARMENT (ملابس داكنة) و DAILY WASH (غسيل يومي) و ECO DRUM CLEAN (تنظيف الخوض) و SUPER ECO WASH (غسيل الفقااعات الخارق) و OUTDOOR CARE (للعناية بالملابس الخارجية) و BABY CARE (ملابس الطفل) و WOOL (صوف) و HAND WASH (غسل يدوي).
- سيتم إضاءة المؤشرات المرتبطة بلوحة التحكم.
٨. في هذا الوقت، يمكنك التحكم في درجة حرارة عملية الغسل وحجم الشطف وسرعة التجفيف ووقت التأجيل بالضغط على زر الخيار المناسب.
 ٩. اضغط على الزر Start/Pause (بدأ/أيقاف) وعندما تبدأ الغسالة في العمل، يضيء مؤشر العملية ويظهر الوقت المتبقي للدورة على الشاشة.

خيار الإيقاف

من الممكن إضافة/إزالة قطع الملابس في غضون ٥ دقائق من بدء الغسيل.

١. اضغط على الزر Start/Pause (بدأ/أيقاف) لإلغاء قفل الباب.
٢. لا يمكن فتح الباب عندما تكون درجة حرارة الماء عالية جداً أو مستوى الماء عالي جداً.
٢. اضغط على الزر Start/Pause (بدأ/أيقاف) لإعادة تشغيل الغسالة.

عند انتهاء الدورة:

بعد انتهاء دورة الغسل بالكامل، يتم إيقاف الغسالة تلقائياً.

١. افتح الباب.
٢. أخرج الملابس.

غسل الملابس يدوياً

- يمكنك غسل الملابس يدوياً دون استخدام قرص خديد الدورة.
١. قم بتشغيل مصدر توريد الماء.
 ٢. اضغط على زر **Power** (الطاقة) الموجود في الغسالة.
 ٣. افتح الباب.
 ٤. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
 ٥. أغلق الباب.
 ٦. أضف مسحوق الغسيل. وإذا لزم الأمر. أضف منعم الأقمشة أو مسحوق الغسل الأولي في الحجيرات المناسبة.
 ٧. اضغط على الزر **Temp.** (درجة الحرارة) لتحديد درجة الحرارة المطلوبة. (الماء بارد: جميع اللبسات مطفاة) و ٢٠ و ٣٠ و ٤٠ و ٦٠ و ٩٥ درجة مئوية)
 ٨. اضغط على الزر **Rinse** (شطف) لتحديد العدد المطلوب لدورات الشطف.
 - الحد الأقصى لعدد دورات الشطف هو خمسة.
 - يتم زيادة مدة الغسيل وفقاً لعدد الدورات.
 ٩. اضغط على الزر **Spin** (دوران) لتحديد سرعة التجفيف.
 - (X) : بدون تجفيف. جميع اللبسات مطفاة: **Rinse Hold** (انتظار الشطف)
 ١٠. اضغط على الزر **Delay End** (تأجيل التشغيل) بشكل متكرر للتبديل بين خيارات **Delay End** (تأجيل التشغيل) المتوفرة (بين ٣ و ١٩ ساعة بإمكانية زيادة ساعة). تشير الساعة المعروضة إلى الوقت الذي يتم الانتهاء فيه من عملية الغسل.
 ١١. اضغط على الزر **Start/Pause** (بدأ/أيقاف) وعندها تبدأ الغسالة بالدوران.

دليل غسل الملابس

اتبع هذه التعليمات البسيطة للحصول على ملابس أكثر نظافة وأكثر فاعلية.

قم بفحص بطاقة العناية الموجودة على الملابس دوماً قبل الغسل.



افرز الملابس واغسلها وفقاً للمعايير التالية:

- بطاقة العناية: افرز الملابس إلى أقطان وألياف مخلوطة وأقمشة صناعية وملابس حريرية وأصواف ورايون.
- اللون: قم بفصل الملابس البيضاء عن الملابس الملونة. اغسل الملابس الجديدة الملونة كل على حدة.
- الحجم: يعمل وضع الملابس بمختلف أحجامها في مرة واحدة على تحسين عملية الغسل.
- رقة اللمس: اغسل الملابس الرقيقة كل على حدة. باستخدام الدورة **Delicate** (أنسجة رقيقة) للحصول على ملابس صوفية وستائر وملابس حريرية نقية تبدو جديدة. افحص العلامات الموجودة بالملابس التي تريد غسلها أو راجع جدول العناية بالأقمشة في الملحق.

إفراغ الجيوب

قم بإفراغ كافة جيوب الملابس قبل كل عملية غسل. حيث يمكن أن تتسبب الأشياء الصغيرة والصلابة ذات الأشكال غير المنتظمة مثل العملات المعدنية والشفرات والدبابيس وماسكات الورق في تلف الغسالة. لا تقم بغسل الملابس المزودة بإبزيمات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.

قد تتسبب المعادن المستخدمة في الملابس في تلفها وتلف الخوض. اقلب الملابس المزينة بالأزرار والمطرزة على ظهرها قبل غسلها. إذا تركت إبريمات السراويل والجواكت مفتوحة أثناء الغسل. فإن هذا قد يتسبب في تلف سلة التجفيف. يجب غلق الإبزيمات وتثبيتها بخيط قبل الغسل.

قد تتشابك الملابس ذات الخيوط الطويلة مع ملابس أخرى وقد يؤدي ذلك إلى تلف هذه الملابس. احرص على تثبيت الخيوط قبل بدء الغسل.

الغسل الأولي للملابس القطنية

تقدم لك الغسالة الجديدة باستخدام مساحيق الغسيل الحديثة. أفضل نتائج لعمليات الغسل. ومن ثم فهي تساعدك على توفير الطاقة الكهربائية والوقت والماء والمسحوق. لكن إذا كانت الملابس القطنية شديدة الاتساخ. استخدم الغسل الأولي مع مسحوق الغسيل الذي يحتوي على البروتين.

غسل الملابس


تحديد سعة وزن الملابس

لا تتجاوز الوزن المحدد للغسالة حيث يؤدي ذلك إلى الحصول على نتائج غير مرضية. استخدم الجدول التالي لتحديد سعة الوزن لنوع الملابس التي تقوم بغسلها.

نوع القماش	سعة الوزن
الطرز	WF702U4/WF700U4
COTTON (قطن) - متوسط/خفيف الاتساخ - شديدة الاتساخ	٧,٠ كجم
SYNTHETICS (مواد اصطناعية)	٢,٥ كجم
DENIM (قماش قطني)	٣,٠ كجم
BEDDING (شراشف)	٢,٠ كجم
DARK GARMENT (ملابس داكنة)	٣,٠ كجم
WOOL (صوف)	٢,٠ كجم

- في حالة عدم توازن الملابس ("UE" يضاء المصباح على الشاشة)، وفي هذه الحالة، أعد توزيع الملابس.
- حيث يؤدي عدم توازن الملابس إلى تقليل فعالية دورة التجفيف.
- عند غسل المفارش أو الأحففة، قد تطول مدة الغسل أو تقل فعالية عملية التجفيف.
- بالنسبة إلى "المفروشات" أو أغطية "الللحاف"، يوصى بأن تكون الحمولة ٢,٠ كجم أو أقل.

تأكد من إدخال حمالات الصدر (التي يمكن غسلها في الماء) في شبكة غسل (يتم شراؤها بشكل منفصل).

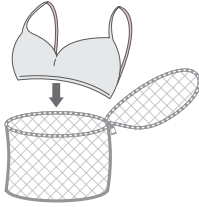

- قد تنكسر الأجزاء المعدنية الموجودة في حمالات الصدر مما قد يؤدي إلى تلف الغسل. لذا يجب عليك أن تتأكد من وضعهم داخل شبكة غسل جيدة.
- قد تتعلق الملابس الصغيرة والخفيفة بالباب مثل الجوارب والقفازات والمنسوجات والمناديل. لذا قم بوضعهم داخل شبكة غسل جيدة.

لا تقم بغسل شبكة الغسل وحدها دون وجود ملابس بها. فقد يؤدي ذلك إلى حدوث اهتزازات غير طبيعية في الغسالة مما قد يتسبب في حدوث إصابات.



معلومات حول مسحوق الغسيل والمواد الإضافية

ما هو مسحوق الغسيل الذي يمكنك استخدامه

يعتمد نوع مسحوق الغسيل الذي تستخدمه على نوع القماش (القطن أو الألياف الصناعية أو الملابس الناعمة أو الصوف)، والألوان ودرجة حرارة الماء ودرجة الاتساخ. استخدم دوماً مسحوق الغسيل ذا "الرغوة القليلة" المصمم خصيصاً للغسالات الأوتوماتيكية. اتبع توصيات الشركة المصنعة لمسحوق الغسيل وفقاً لوزن الملابس ودرجة الاتساخ ودرجة نقاء الماء في منطقتك. وإذا لم تكن تعرف ما إذا كان الماء نقياً أم لا في منطقتك، اتصل بالهيئة المسؤولة عن الماء.

لا تستخدم منظف صلب أو خشن لأنه قد يتبقى في دورة الشطف لأن ذلك قد يتسبب في أداء الغسالة لدورة الشطف بشكل غير صحيح. أو يتسبب في إعاقه تدفق الماء.



الرجاء الانتباه إلى الأمور التالية عند استخدام دورة الملابس الصوفية.




- استخدم منظف سائل معتدل مخصص للملابس الصوفية فقط.
- عند استخدام منظف مسحوق، فقد يبقى على الملابس ويسبب التلف للمادة (الملابس الصوفية).

درج مسحوق الغسيل

تحتوي الغسالة على حجيرات منفصلة لتوزيع المسحوق ومنعم الأقمشة. قم بإضافة كافة المواد الإضافية الخاصة بالغسيل إلى الحجيرة المناسبة قبل بدء تشغيل الغسالة.


ⓘ احذر فتح درج مسحوق الغسيل عندما تكون الغسالة قيد التشغيل حيث قد تتعرض للماء أو البخار الساخن.

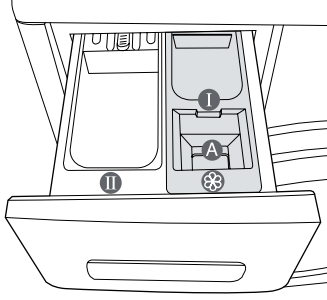

١. اسحب درج مسحوق الغسيل الموجود على الجانب الأيمن من لوحة التحكم.
٢. قم بإضافة كمية من مسحوق الغسيل الموصى به مباشرة في حجيرة المسحوق ⓘ قبل تشغيل الغسالة.

ⓘ قم باستخدام درج المنظف السائل لوضع المنظف السائل (راجع قسم "المنظف السائل" للطراز المماثل).

- لا تقم بإضافة مسحوق التنظيف بداخل درج المنظف السائل.
- ٣. قم بإضافة الكمية الموصى بها من منعم الأقمشة في الحجيرة الخاصة به ⓘ إذا لزم الأمر. احذر تجاوز خط MAX FILL (الحد الأقصى للتعبئة) (A).
- لا تقم بإضافة أي منظف مسحوق/سائل إلى حجيرة المنعم ⓘ.

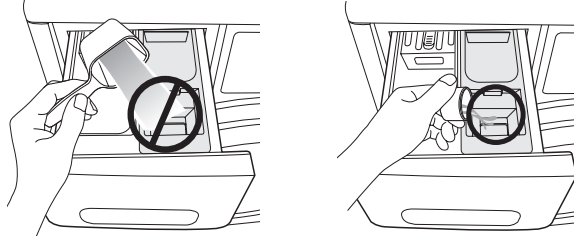


٤. عند استخدام خيار Prewash (قبل الغسل)، قم بإضافة الكمية الموصى بها من مسحوق الغسيل في حجيرة الغسل الأولي ⓘ.

ⓘ لا تستخدم أنواع المساحيق التالية عند غسل الملابس كبيرة الحجم.

- مساحيق الغسيل التي تكون على شكل ألواح أو أقراص
- المساحيق التي تكون على شكل كرة أو شبكة

ⓘ يجب إذابة منعم الأقمشة المركز أو السميكة بقليل من الماء قبل صبه في درج التوزيع (لمنع إعاقة تدفق الماء).


ⓘ تجنب عدم تدفق المنعم الأقمشة عند غلق درج المنظف بعد إضافة المنعم الأقمشة بداخل حجيرة مسحوق الشطف.

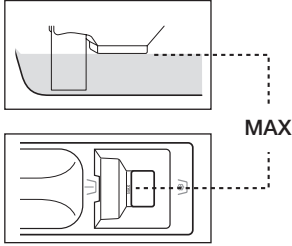

المنظف السائل (متوفر بطرازات محددة)

لاستخدام منظف سائل، قم بوضع درج المنظف السائل بداخل القسم الرئيسي للغسيل الخاص بقاعدة المنظف السائل بالدرج الخاص به.

- احذر تجاوز الماء عن الخط MAX (الحد الأقصى).
- في حالة استخدام مسحوق تنظيف، قم بإزالة درج المنظف السائل من قاعدة المنظف. لن يتم توزيع مسحوق التنظيف بواسطة درج المنظف السائل.
- قد يتبقى كمية من المنظف السائل بدرج المنظف بعد الانتهاء من الغسل.

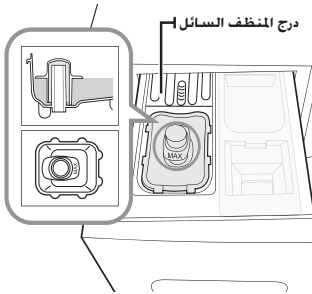


تنظيف الغسالة وصيانتها


يؤدي حفظ الغسالة نظيفة على تحسين أدائها، وتجنب الإصلاحات غير الضرورية، وزيادة عمر الغسالة.

ECO DRUM CLEAN (تنظيف الحوض)

تعد هذه الدورة دورة تنظيف ذاتي يتم من خلالها إزالة الأتربة التي قد تعلق بالغسالة من الداخل.

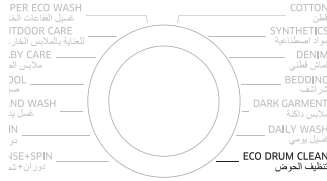


١. اضغط على الزر Power (الطاقة).
٢. قم بتدوير Cycle Selector (قرص تحديد الدورة) إلى ECO DRUM CLEAN (تنظيف الحوض).
- يمكنك فقط استخدام الوظيفة Delay End (تأجيل التشغيل).
- يتم ضبط درجة حرارة المياه أثناء ECO DRUM CLEAN (تنظيف الحوض) إلى ٧٠ درجة مئوية.
- بسبب ميزات الغسالة الآلية، يتم ضبط درجة حرارة الماء على ٧٠ درجة مئوية أثناء دورة ECO DRUM CLEAN (تنظيف الحوض). إلا أن شاشة العرض ستعرض فقط ٦٠ درجة مئوية على لوحة التحكم.
- لا يمكنك تغيير درجة الحرارة.
- سيتم الضبط الأوتوماتيكي على برنامج الملابس القطنية عند مستوى ماء متوسط بدرجة حرارة ٣٠ درجة مئوية عند وضع الملابس.

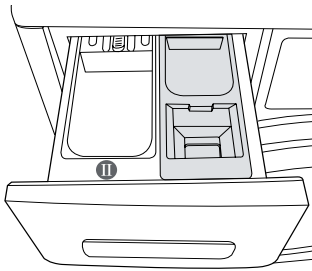

٣. ضع الكمية المناسبة من المنظف في حجرة المسحوق (II) وأغلق درج المسحوق (عند تنظيف الحاوية باستخدام سائل منظف).
- تأكد من استخدام المنظف الموصى به لتنظيف الحاوية.
- يوجد نوعان من المنظفات: المسحوق والسائل. يتوفر المنظف السائل المستخدم فقط بدرج المنظف السائل (اختيار).

٤. اضغط على الزر Start/Pause (بدأ/أيقاف).
- تبدأ دورة ECO DRUM CLEAN (تنظيف الحوض) عند الضغط على الزر Start/Pause (بدأ/أيقاف).
- يمكنك تنظيف الحاوية بدون استخدام منظف بواسطة الدورة ECO DRUM CLEAN (تنظيف الحوض).
- لا تستخدم الدورة ECO DRUM CLEAN (تنظيف الحوض) أبدًا عند وجود ملابس داخل الغسالة. قد يتسبب ذلك في تلف النسيج أو في حدوث مشكلة في الغسالة.
- احذر استخدام المسحوق العادي بدورة ECO DRUM CLEAN (تنظيف الحوض).
- استخدم ١٠/١ فقط من كمية منظف الحاوية والموصى به من قبل الشركة المصنعة للمنظف.
- تأكد من استخدام الأكسجين المبيض فقط. حيث إن استخدام الكلور المبيض قد يؤدي إلى تغيير اللون أو إزالته.
- المنظف المسحوق: استخدم [المنظف المبيض المسحوق] أو [المنظف المستخدم لتنظيف الحاوية فقط].
- المنظف السائل: استخدم [الأكسجين المبيض السائل] أو [المنظف المستخدم لتنظيف الحاوية فقط].




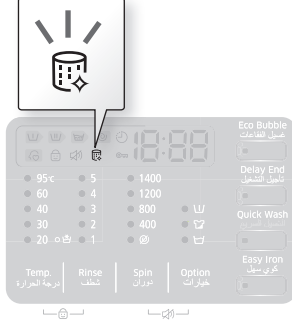

وظيفة التنبيه الآلي لتنظيف الحاوية صديق البيئة

- إذا كان مؤشر ECO DRUM CLEAN (تنظيف الحوض) في حالة إضاءة بعد الغسيل. فهذا يشير إلى ضرورة إجراء تنظيف لحلة الغسيل (الأسطوانة). يشير ذلك إلى ضرورة تنظيف الحوض (الحاوية). في هذه الحالة، قم بإخراج الغسيل من الغسالة، ثم قم بتشغيلها. وتنظيف الحاوية باستخدام ECO DRUM CLEAN (تنظيف الحوض).
- إذا لم يتم بتنفيذ إجراء ECO DRUM CLEAN (تنظيف الحوض). فسيظل مؤشر ECO DRUM CLEAN (تنظيف الحوض) في حالة إيقاف تشغيل (إطفاء) على الشاشة. بالرغم من ذلك، يتم تشغيل مؤشر "ECO DRUM CLEAN (تنظيف الحوض)" على اللوحة والمصباح الموجود على Cycle Selector (قرص تحديد الدورة) مرة أخرى بعد دورتين من الغسيل. ومع ذلك، لا يؤدي الأمر إلى حدوث مشكلة في الغسالة.
- وعمومًا، فإن وظيفة التنبيه الآلي لتنظيف الحاوية صديق البيئة يظهر مرة في الشهر تقريبًا. قد يختلف تكرار التنبيه وفقًا لعدد مرات استخدام الغسالة.
- لمزيد من الاحتياط، الرجاء أيضًا تنظيف مصفاة الخلفات (راجع القسم "تنظيف مصفاة الخلفات" بصفحة ٣٥). وإلا قد ينخفض الأداء الخاص بوظيفة الفقاعات. 

تصريف الماء من الغسالة عند الطوارئ

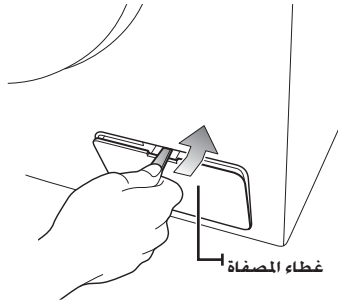

١. افصل الغسالة من مصدر الطاقة.
٢. افتح غطاء المصفاة باستخدام عملة معدنية أو مفتاح.




٣. قم بسحب أنبوب التصريف عند الطوارئ لتخليصه من خطاف التثبيت.



٤. قم بإخراج غطاء أنبوب التصريف عند الطوارئ.
٥. اسمح بتدفق الماء بأكمله في وعاء.
٦. قد تبقى مياه بكمية أكثر مما تتوقع. قم بتحضير وعاء أكبر.
٧. قم بإعادة وضع غطاء أنبوب التصريف عند الطوارئ في مكانه ثم قم بتثبيت الأنبوب بخطاف التثبيت.
٧. أعد غطاء المصفاة إلى مكانه.



تنظيف الغسالة وصيانتها

تنظيف درج مسحوق الغسيل والجزء الداخلي منه

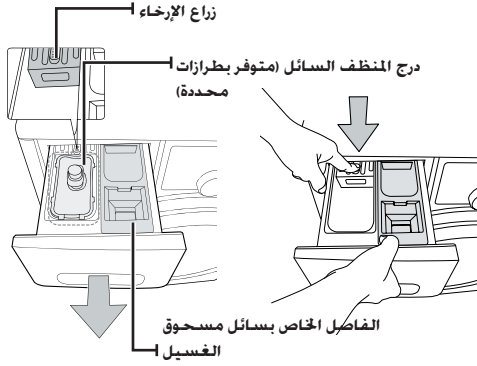

١. اضغط ذراع الإرخاء الموجودة في داخل درج مسحوق الغسيل واسحبه إلى الخارج.
٢. قم بإزالة الفاصل الخاص بمسحوق الغسيل من درج مسحوق الغسيل

٣. اغسل كافة الأجزاء بالماء الجاري.

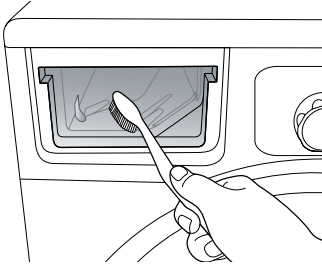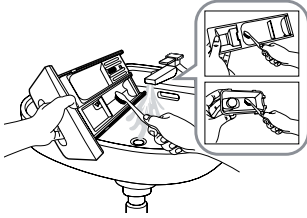


٤. نظف الجزء الداخلي للدرج باستخدام فرشاة أسنان قديمة.
٥. ضع الفاصل الخاص بمسحوق الغسيل في مكانه عن طريق دفعه بقوة في الدرج.
٦. أعد الدرج إلى مكانه.
٧. قم بتشغيل دورة الشطف دون وجود أي غسيل في الحايوة لإزالة أي مسحوق متبقي.

تنظيف مصفاة الخلفات

توصي Samsung بتنظيف مصفاة الخلفات ٥ أو ٦ مرات في العام، أو عند عرض رسالة الخطأ "5E" (راجع "تصريف الغسالة عند الطوارئ" في الصفحة السابقة).




قبل البدء بتنظيف مصفاة الخلفات، تأكد من فصل سلك التيار الكهربائي.

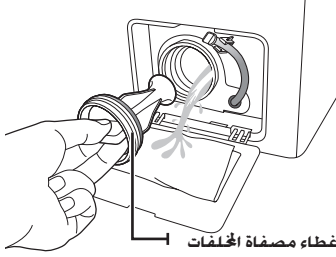

غطاء مصفاة الخلفات

١. قم بإزالة المياه المتبقية أولاً (راجع "تصريف الغسالة عند الطوارئ" بصفحة ٣٣).
إذا قمت بفصل المصفاة بدون تصريف المياه المتبقية، قد يتم رشح المياه المتبقية للخارج.
٢. افتح غطاء المصفاة باستخدام مفتاح أو قطعة معدنية.
٣. أرخ غطاء التصريف عند الطوارئ بلفه إلى اليسار لصرف الماء من الغسالة.
٤. أرخ غطاء مصفاة الخلفات.

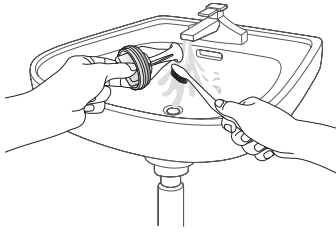

٥. قم بغسل أية أوساخ أو أي مواد أخرى عالقة في مصفاة الخلفات. تأكد من أن مروحة مضخة التصريف الموجودة خلف مصفاة الخلفات غير مسدودة.
 ٦. ضع غطاء مصفاة الخلفات في مكانه.
 ٧. ضع غطاء المصفاة في مكانه.
- لا تقم بفتح غطاء مصفاة الخلفات أثناء تشغيل الغسالة أو قد تتدفق المياه الساخنة للخارج.
- تأكد من استبدال غطاء المصفاة بعد تنظيف المصفاة. إذا كانت المصفاة بخارج الغسالة، قد يحدث خطأ بالغسالة أو يتم تسرب المياه.
 - ينبغي تركيب المصفاة جيداً بعد الانتهاء من تنظيفها.



تنظيف الأسطح الخارجية


١. امسح الأسطح الخارجية لجهاز الغسالة، بما في ذلك لوحة التحكم بقطعة من القماش الناعم ومسحوق تنظيف منزلي غير خادش.
٢. استخدم قطعة من القماش الناعم لتجفيف الأسطح الخارجية.
٣. لا تصب الماء على الغسالة.

تنظيف الغسالة وصيانتها

تنظيف المصفاة الشبكية المتصلة بخرطوم الماء

يجب عليك تنظيف المصفاة الشبكية المتصلة بخرطوم الماء مرة كل عام على الأقل، أو عند ظهور رسالة الخطأ "4E":

١. قم بإيقاف تشغيل مصدر توريد الماء إلى الغسالة.
٢. افصل الخرطوم عن الجانب الخلفي من الغسالة. قم بتغطية الخرطوم بقطعة من القماش. لمنع تدفق الماء بسبب الضغط العالي في الخرطوم.
٣. باستخدام الزبدية، اسحب المصفاة الشبكية إلى الخارج من طرف الخرطوم بلطف واشطفها بالماء حتى تصبح نظيفة. نظف كذلك الجزأين الداخلي والخارجي للوصلة الملفوفة.
٤. أعد المصفاة إلى مكانها.
٥. ثبت الخرطوم في الغسالة مرة أخرى.
٦. تأكد أن الوصلات محكمة ضد الماء وقم بتشغيل الصنبور.

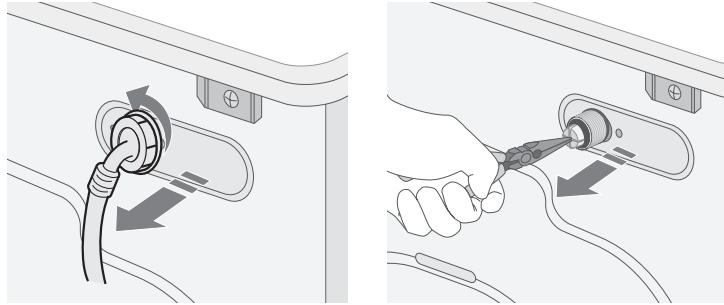

إصلاح جهاز غسالة متجمد

إذا انخفضت درجة الحرارة إلى أقل من درجة التجمد وتجمدت الغسالة:

١. افصل الغسالة من مصدر التيار الكهربائي.
٢. صب الماء الدافئ على صنبور الماء لإرخاء خرطوم توريد الماء.
٣. قم بإزالة خرطوم توريد الماء وانقعه في الماء الدافئ.
٤. صب الماء الدافئ في حاوية الغسالة واتركه لمدة ١٠ دقائق.
٥. أعد توصيل خرطوم توريد الماء إلى صنبور الماء وتأكد من أن توريد الماء والتصريف يتم كما ينبغي.

تخزين الغسالة

إذا كنت بحاجة إلى تخزين الغسالة لمدة طويلة، فمن المستحسن تصريف الماء منها وفصلها. حيث يمكن أن تتلف الغسالة في حالة ترك ماء في الخراطيم والمكونات الداخلية قبل التخزين.

١. اختر الدورة Quick Wash (الغسيل السريع) ثم قم بإضافة مادة تبييض في الحجرة الخاصة بمادة التبييض. قم بتشغيل الغسالة من خلال الدورة دون وجود ملابس بها.
 ٢. قم بإيقاف صنبور الماء وافصل خراطيم صنبور الماء.
 ٣. قم بفصل الغسالة عن منفذ التيار الكهربائي. واترك باب الغسالة مفتوحًا للسماح بدخول الهواء داخل الحاوية.
- في حالة قيامك بتخزين الغسالة في درجات حرارة تحت التجمد، اجعل هناك فرصة لخروج الماء المتبقي في الغسالة قبل استخدامها مرة أخرى.

استكشاف المشاكل وإصلاحها ورموز المعلومات

تحقق مما يلي إذا كانت الغسالة...

المشكلة	الحل
لن تعمل	- تأكد من توصيل قابس الغسالة بمصدر التيار الكهربائي. - تأكد من إغلاق الباب بإحكام. - تأكد من فتح مصدر صنبابير الماء. - تأكد من الضغط على الزر Start/Pause (بدء/أيقاف).
عدم وجود ماء أو عدم وجود ماء كافٍ	- افتح الصنبور تماماً. - تأكد من أن خرطوم توريد الماء غير متجمد. - فك ثنيات خرطوم توريد الماء. - نظف المصفاة الموجودة على الخرطوم الخاص بمدخل الماء.
هل يوجد مسحوق غسيل في الدرج بعد اكتمال دورة الغسيل	- تأكد من تشغيل الغسالة بضغط ماء كافٍ. - تأكد من إضافة مسحوق الغسيل في منتصف درج المسحوق.
تهتز الغسالة أو تحدث صوتاً مرتفعاً	- تأكد من تركيب الغسالة على سطح مستو. إذا كانت الأرض غير مستوية، اضبط قدم الغسالة حتى تستوي على الأرضية. - تأكد من إزالة مسامير الشحن. - تأكد من عدم ملامسة الغسالة لأي شيء آخر. - تأكد من توزيع وزن الملابس الموجودة في الغسالة.
لا يتم تصريف الماء من الغسالة وأو لا تقم بعملية التنشيف	- فك الثنيات الموجودة في خرطوم التصريف، قلل من استخدام الخرطوم الملتوية. - تأكد من أن المصفاة الشبكية المتصلة بخرطوم الماء غير مسدودة.
الباب مغلق ولا يمكن فتحه	- تأكد من تصريف كل الماء في الوعاء الأسطواني للغسالة للخارج. - تأكد من أن ضوء قفل الباب منطفئ. سيتم انطفاء ضوء قفل الباب بعد عملية التصريف.
ضوضاء خرطوم المضخة	تأكد إذا كان المرشح مثبت بإحكام بواسطة قطعة بسيطة من الملابس. الرجاء تنظيف المرشح في الوقت الملائم لتفادي الضوضاء.

في حالة استمرار المشكلة، اتصل بمركز خدمة عملاء Samsung المحلي.

استكشاف المشاكل وإصلاحها ورموز المعلومات

رموز المعلومات

عندما تتعرض الغسالة للتعطل، قد يظهر أحد رموز المعلومات على الشاشة. في حالة حدوث ذلك، الرجاء التحقق من هذا الجدول وتجربة الحلول المقترحة قبل الاتصال بخدمة العملاء.

رمز الكود	الحل
dE	- تأكد من إغلاق الباب بإحكام. - تأكد من أن الملابس غير عالقة بالباب.
4E	- تأكد أن صنبور توريد الماء مفتوح. - تأكد من ضغط الماء. - قم بتنظيف المصفاة الشبكية المتصلة بخراطوم الماء. - عند ظهور الكود "4E" على شاشة عرض الغسالة، فإن ذلك يعني أن الغسالة ستقوم بعملية الصرف لمدة 3 دقائق. يُرجى العلم أن زر التشغيل لا يستجيب للضغط عليه خلال هذه الفترة.
5E	- نظف مصفاة الخلفات. - تأكد من تركيب خرطوم تصريف الماء بطريقة صحيحة.
UE	وزن الملابس غير موزّع. قم بإعادة توزيع الملابس. وفي حالة غسيل قطعة واحدة من الملابس، مثل برنس حمام أو جينز، قد لا تكون نتيجة التنشيف النهائي مرضية. وتظهر رسالة خطأ "UE" في إطار العرض.
cE/3E	اتصل بخدمة ما بعد البيع.
Sud	حدث هذه الحالة عند استئجار كمية كبيرة من الرغوة. ويتم كذلك عرضها عند التخلص من الرغوة. عند الانتهاء من عملية الإزالة، تتم متابعة الدورة الطبيعية (ويعد ذلك إحدى العمليات الطبيعية، هذا الخطأ يهدف إلى الحماية ضد العيوب غير القابلة للكشف عنها).
Uc	- إذا كانت فلطية الطاقة المزودة غير مستقرة، فقد تتوقف الغسالة عن العمل مؤقتاً لحماية أجهزتها الكهربائية. - إذا كان يتم إمداد الفلطية الصحيحة للغسالة، فستعاود الدورة العمل أوتوماتيكياً.

بالنسبة للرموز التي لم تذكر أعلاه، أو في حالة عدم مساهمة الحل المقترح في حل المشكلة، اتصل بمركز خدمة Samsung أو الموزع المحلي المعتمد التابع لـ Samsung.

جدول الدورات

جدول الدورات

(● خيار المستخدم)

البرنامج	أقصى وزن (كجم)	مسحوق الغسيل			الحد الأقصى لدرجة الحرارة (مئوية)	سرعة التنشيف (الحد الأقصى) دورة/دقيقة
		منعم الأقمشة	غسل	قبل الغسل		
البرنامج	WF702U4/WF700U4					WF702U4/WF700U4
COTTON (قطن)	٧,٠	●	نعم	●	٩٥	١٤٠٠
SYNTHETICS (مواد اصطناعية)	٢,٥	●	نعم	●	٦٠	١٢٠٠
DENIM (قمماش قطني)	٣,٠	●	نعم	●	٦٠	٨٠٠
BEDDING (شراشف)	٢,٠	●	نعم	●	٤٠	٨٠٠
DARK GARMENT (ملابس داكنة)	٣,٠	●	نعم	●	٤٠	١٢٠٠
DAILY WASH (غسيل يومي)	٢,٠	●	نعم	●	٦٠	١٤٠٠
ECO DRUM CLEAN (تنظيف الحوض)	-	-	نعم	-	٧٠	٤٠٠
SUPER ECO WASH (غسيل الفقاعات الحارقة)	٣,٠	●	نعم	●	٤٠	١٢٠٠
OUTDOOR CARE (للعتاية بالملابس الخارجية)	٢,٠	●	نعم	-	٤٠	١٢٠٠
BABY CARE (ملابس الطفل)	٣,٠	●	نعم	●	٩٥	١٤٠٠
WOOL (صوف)	٢,٠	●	نعم	-	٤٠	٨٠٠
HAND WASH (غسل يدي)	٢,٠	●	نعم	-	٤٠	٤٠٠

البرنامج	غسيل أولي	مكثف	نقع	تأجيل (التشغيل)	Quick Wash (الغسيل السريع)	Easy Iron (سهل)	My Cycle (الدورة المفضلة)
COTTON (قطن)	●	●	●	●	●	●	●
SYNTHETICS (مواد اصطناعية)	●	●	●	●	-	●	●
DENIM (قمماش قطني)	●	●	●	●	-	●	●
BEDDING (شراشف)	●	●	●	●	-	●	●
DARK GARMENT (ملابس داكنة)	●	●	-	●	-	●	●
DAILY WASH (غسيل يومي)	●	●	●	●	-	●	●
ECO DRUM CLEAN (تنظيف الحوض)	-	-	-	●	-	-	-
SUPER ECO WASH (غسيل الفقاعات الحارقة)	●	●	●	●	-	●	●
OUTDOOR CARE (للعتاية بالملابس الخارجية)	-	-	-	●	-	-	●
BABY CARE (ملابس الطفل)	●	●	●	●	-	●	●
WOOL (صوف)	-	-	-	●	-	-	●
HAND WASH (غسل يدي)	-	-	-	●	-	-	●

١. تستغرق دورة الغسل الأولى مدة أطول بحوالي ١٨ دقيقة.
 ٢. تم قياس بيانات مدد الدورات وفقاً للشروط المنصوص عليها في مقياس IEC 60456 / EN 60456.
 ٣. تتوافق البرامج COTTON (قطن) عند درجة حرارة ٦٠ مئوية + Intensive (غسل كثيف) + Eco Bubble (غسيل الفقاعات) مع المعيار EN60456.
 ٤. قد تختلف مدة الدورة في كل منزل عن القيم المبينة في الجدول بسبب الاختلاف في ضغط الماء ودرجة الحرارة الخاصة بتوريد الماء وكمية الغسيل ونوعه.
 ٥. عند تحديد وظيفة Intensive Wash (غسل كثيف)، يتم زيادة مدة الدورة لكل الدورات.
 ٦. تم تحديد مواصفات ملصق الطاقة باستخدام البرنامج الآتي وفقاً للمعيارين SASO 2692 و SASO 2693.
- برنامج الطراز WF70***** هو COTTON (قطن) ٦٠ درجة مئوية + intensive (غسل كثيف) + شطف مرتين + ١٢٠٠ دورة في الدقيقة.

الملحق

جدول العناية بالأقمشة

توضح الرموز التالية تعليمات العناية بالملابس. تتضمن بطاقات العناية أربعة رموز على النحو التالي: غسيل وتبييض وجفيف وكي (وتنظيف جاف إذا لزم الأمر).

يضمن استخدام هذه الرموز التناسق بين الشركات المصنعة للملابس المحلية والمستوردة. اتبع تعليمات بطاقة العناية لزيادة عمر الملابس وتقليل مشاكل الغسيل.

مواد مقاومة		يمكن الكي عند ١٠٠°م بحد أقصى	
ملابس رقيقة		يحظر الكي	
يمكن الغسل عند ٩٥°م		يمكن استخدام التنظيف الجاف باستخدام أي مواد مذيبيّة	
يمكن الغسل عند ٩٠°م		التنظيف الجاف بالبروكوريد أو الوقود الخفف أو الكحول النقي أو R١١٣ فقط	
يمكن الغسل عند ٤٠°م		التنظيف الجاف بوقود الطائرات أو الكحول النقي أو R١١٣ فقط	
يمكن الغسل عند ٣٠°م		يحظر استخدام التنظيف الجاف	
مكن غسلها باليد		جفف وهي مفرودة	
تنظيف جاف فقط		يمكن نشرها لتجف	
يمكن استخدام مادة تبييض مع الماء البارد		جفيف الملابس وهي معلقة على حمالة	
يحظر استخدام مادة تبييض		جفيف بالتدوير، حرارة عادية	
يمكن الكي عند ٢٠٠°م بحد أقصى		جفيف بالتدوير، حرارة خفيفة	
يمكن الكي عند ١٥٠°م بحد أقصى		يحظر جفيفها بالتدوير	

حماية البيئة

- هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص من هذا الجهاز، يرجى مراعاة القوانين المحلية الخاصة بالتخلص من النفايات. اقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر طاقة. قم بإزالة الباب لمنع تعرض الحيوانات أو الأطفال الصغار للاحتباس داخل الجهاز.
- لا تضع مسحوق غسيل أكثر من الكمية المبيّنة في إرشادات الشركة المصنعة لمسحوق الغسيل.
- استخدم مواد إزالة البقع ومواد التبييض قبل دورة الغسيل عند الحاجة فقط.
- وفر الماء والكهرباء من خلال إجراء الغسيل بأوزان كاملة (تختلف الكمية وفقاً للبرنامج المستخدم).

المواصفات

		اسم الجهة المصنعة و/أو العلامة التجارية
صنع في الصين		بلد المنشأ
WF702U/WF700U4		رقم النوع
غسالة كهربية أوتوماتيكية		نوع من الغسالات
غسالة الملابس ذات الأسطوانة		نظام الغسيل
٢٣٠ فولت-		فرق الجهد الكهربائي المسموح (الفولت)
٦٠ هرتز		التردد المسموح به (هرتز)
١١٠٠ وات	قدرة الدخل المسموح بها	قدرة الدخل المسموح بها (واط أو كيلو واط)
٢٠٠٠ وات	جهاز تدفئة المياه	
٣٥٠ وات	المحرك الرئيسي	
٣٥ وات	محرك المضخة	
٣٥ وات	محرك الدوران	
٧,٠ كجم		سعة الغسالة القياسية (المصنفة) (كجم)
١٥ لتر		الكمية القياسية المياه المستخدمة (لتر)
الفئة ١		فئة الغسالة
IPX٤		رقم IP
٨٠٠ كيلوباسكال		أقصى ضغط مسموح به للمياه الداخلة إلى الغسالة
٥٠ كيلوباسكال		أقل ضغط مسموح به للمياه الداخلة إلى الغسالة
٤٧ لتر		كمية الماء
العرض ٦٠٠ مم × العمق ٥٥٠ مم × الارتفاع ٨٥٠ مم		الأبعاد
٦١ كجم		الوزن الصافي
١٤٠٠ دورة في الدقيقة		دورات التنشيف

- يُمنع تثبيت الغسالة على سطح رطب.
- يتبعن إيقاف تشغيل العصاره في حالة عدم الاستخدام.
- يُحظر السماح للأطفال بتشغيل الغسالة.
- قد يتعرض شكل المنتج ومواصفاته للتغيير دون إخطار مسبق لأغراض تحسين المنتج.
- يجب عدم وضع اليدين في أنبوب صرف الماء.
- إذا كان من الممكن فتح غطاء الغسالة أثناء تصريف المياه أو كانت تستغرق ١٥ ثانية أو يزيد للإيقاف الكلي لصرف المياه من حجرة التصريف فإن يُجب التعامل مع الأمر على أنه مشكلة بالغسالة.

مذكرة

مذكرة



هل لديك أسئلة أو تعليقات؟

البلد	اتصل بـ	أو قم بزيارة موقعنا على الإنترنت على
SAUDI ARABIA	920021230	www.samsung.com/sa/support www.samsung.com/sa_en/support (English)

كود رقم، DC68-02917F-01_AR